

Mess-, Regel- und Überwachungsgeräte für Haustechnik, Industrie und Umweltschutz

Lindenstraße 20 74363 Güglingen

Telefon +49 7135-102-0 Service +49 7135-102-211 Telefax +49 7135-102-147 info@afriso.de www.afriso.de

# **Operating Instructions**

Eurovac .....

## Leak Detector Low Vacuum Type Eurovac NV

Leckanzeigegerät

-

-

Retrieb

Prüfen Alarm

Quittieren

Service

AFRISO

let

# 43755
# 43782
# 43789



F

- Read instructions before using device!
- Solution: Observe all safety information!
- Keep instructions for future use!

01.2011 0 854.001.0510

## Contents

1	This ir	nstruction manual	4		
	1.1	Precautions	4		
	1.2	Explanation of symbols and typeface	4		
2	Safetv		5		
	2.1	Intended use	5		
	2.2	Predictable incorrect application	5		
	2.3	Safe handling	5		
	2.4	Staff gualification	6		
	2.5	Modifications to the product	6		
	2.6	Usage of spare parts and accessories	6		
	2.7	Liability information	6		
3	Produ	ct description	7		
	3.1	Function	8		
	3.2	Operating modes	8		
	3.3	Application examples	9		
4	Techn	ical specifications	.10		
	4.1	Approvals, tests and conformities	11		
5	Trans	port and storage	.12		
6	Mount	ing and commissioning	.12		
	6.1	Preparing mounting	12		
	6.2	Installation site	.13		
	6.3	Installing the leak detector	.14		
	6.4	Electrical connection	15		
	6.5	Hose connections	.17		
	6.6	Valve settings	18		
	6.7	Commissioning the device	18		
7	Opera	tion	.19		
	7.1	Alarm condition	19		
	7.2	Function test	19		
8	Mainte	enance	21		
	8.1	Service indication	.21		
	8.2	Maintenance activities	22		
9	Troub	leshooting	.23		
	9.1	Evaluation of the pump operating time	24		
10	Shutti	ng down, disposal	.25		
11	Spare	parts and accessories	.25		
	- F F				

Warra	nty	26
Copyr	ght	26
Custo	ner satisfaction	26
Addre	SSES	26
Apper	dix	27
16.1	Certificate of expert	27
16.2	Approval documents	28
	Warra Copyri Custor Addres Appen 16.1 16.2	Warranty Copyright Customer satisfaction Addresses Appendix 16.1 Certificate of expert 16.2 Approval documents

## 1 This instruction manual

This instruction manual is part of the product.

- Read this manual before using the product.
- ► Keep this manual during the entire service life of the product and always have it readily available for reference.
- Always hand this manual over to future owners or users of the product.

## 1.1 Precautions

#### WARNING TERM Type and source of the danger are shown here.



Precautions to take in order to avoid the danger are shown here.

There are three different levels of warnings:

Warning Term	Meaning
DANGER	Immediately imminent danger! Failure to observe the information will result in death or severe injuries.
WARNING	Possibly imminent danger! Failure to observe the information may result in death or severe injuries.
CAUTION	Dangerous situation! Failure to observe the information may result in minor or severe injuries as well as damage to property.

### 1.2 Explanation of symbols and typeface

Symbol	Meaning
$\mathbf{N}$	Prerequisite for an activity
•	Activity consisting of a single step
1.	Activity consisting of a several steps
Ŷ	Result of an activity
•	Bulleted list
Text	Indication on display
Highlighting	Highlighting

## 2 Safety

#### 2.1 Intended use

The Eurovac NV leak detector for vacuum systems is a class 1 leak detector according to EN 13160-1.

The Eurovac HV leak detector may only be used to detect leaks in tanks which are not pressurised (i.e. operated under atmospheric conditions) and which are used for the storage of liquids.

#### Tanks

 Tanks made of metallic and non-metallic materials with leak protection lining with approval of use of the German Institute for Building Technology (Deutschen Institut für Bautechnik) whose suction line leads to the bottom of the interstitial space.

#### Liquids

- Water-polluting liquids with a flash point > +55 °C (formerly danger class AIII), which do not become viscous and which do not release solid matter
- AdBlue® (urea solution 32.5 %) according to DIN 70070

The leak detector must be resistant to the liquid and its vapours. The materials used are: PVC, silicone, ABS, NBR, PA6, EPP, EPDM. Any use other than the application explicitly permitted in this instruction manual is not permitted.

#### 2.2 Predictable incorrect application

The Eurovac NV leak detector must never be used in the following cases:

- Hazardous area (Ex) If the device is operated in hazardous areas, sparks may cause deflagrations, fires or explosions.
- Use with aggressive liquids which attack the materials of the leak detector

### 2.3 Safe handling

This product represents state-of-the-art technology and is made according to the pertinent safety regulations. Each device is subjected to a function and safety test prior to shipping.

Operate the product only when it is in perfect condition. Always observe the operating instructions, all pertinent local and national directives and guidelines as well as the applicable safety regulations and directives concerning the prevention of accidents.

# WARNING Severe burns or death caused by mains voltage in the control unit.



• Do not expose the leak detector to water.

- Interrupt the mains voltage supply before opening the leak detector or before performing maintenance and cleaning work and make sure it cannot be switched on by accident.
- Do not tamper with the leak detector in any way whatsoever.

### 2.4 Staff qualification

Mounting, commissioning, maintenance and cleaning may only be performed by specialised companies as per § 3 of the German Ordinance on Installations for Handling Water-Polluting Substances (VAwS of March 31, 2010) unless such activities do not have to be performed by specialised companies according to the applicable local directives or unless the manufacturer of the device has such activities performed by his own, trained staff.

Electrical work may only be performed by trained electricians and in compliance with all applicable local and national directives.

#### 2.5 Modifications to the product

Changes or modifications made to the product by unauthorised persons may lead to malfunctions and are prohibited for safety reasons.

#### 2.6 Usage of spare parts and accessories

Usage of unsuitable spare parts and accessories may cause damage to the product.



#### 2.7 Liability information

The manufacturer shall not be liable in any form whatsoever for direct or consequential damage resulting from failure to observe the technical instructions, guidelines and recommendations.

The manufacturer or the sales company shall not be liable for costs or damages incurred by the user or by third parties in the usage or application of this device, in particular in case of improper use of the device, misuse or malfunction of the connection, malfunction of the device or of connected devices. The manufacturer or the sales company shall not be liable for damage whatsoever resulting from any use other than the use explicitly permitted in this instruction manual.

The manufacturer shall not be liable for misprints.

## 3 Product description



- 1 Rubber grommet
- 2 Green LED "Supply ON"
- 3 Button "Test"
- 4 Red LED "Alarm"
- 5 Button "Mute"
- 6 Yellow LED "Service"
- 7 Button "Set"
- 8 Measurement valve
- 9 Measurement line connection
- 10 Pressure gauge connection
- 11 Cover for hose connections
- 12 Exhaust line connection
- 13 Test valve
- 14 Suction line connection
- 15 Condensate trap with filter
- 16 Cable gland

#### Fig. 1: Exterior view and dimensions

The Eurovac NV leak detector generates a constant vacuum in the interstitial space of the tank and triggers an alarm if the vacuum drops.

Eurovac NV contains the following elements in an impact-resistant plastic housing: display elements and controls, a vacuum pump, a pressure switch, a printed circuit board with the electronic components for processing the output signal, a filter and three hose connections for the pneumatic connection to the interstitial space of the tank. The green LED "Supply ON" lights up when mains voltage is available. The alarm is indicated visually and audibly and is made available via a voltage-free relay contact (1 changeover contact).

#### 3.1 Function

Via the suction line, the vacuum pump installed in the leak detector generates a vacuum in the interstitial space of the tank (low vacuum range). The pressure switch measures the pressure in the interstitial space via the measurement line and keeps it at a constant level together with the vacuum pump.

If a leak occurs in the tank's wall or in the leak protection lining (in the inner or outer wall of the tank) either above or below the level of the stored liquid or the ground water, and if this leak is greater than the pump's suction capacity, the vacuum will drop. When the alarm threshold is reached, the red LED "Alarm" and the audible alarm are activated and the relay is energised. The audible alarm can be muted with the button "Mute".

#### 3.2 Operating modes

Eurovac NV is equipped with an output relay to transmit the alarm signal to additional external devices. If no error condition is present, the relay is de-energised. In the case of an alarm, the relay is energised.

Eurovac NV can be operated with or without additional external devices. The following types of additional devices can be used: visual and audible alarm units, telecommunication devices, building control systems, building automation systems, etc.





Fig. 2: AFRISO event reporting system for remote reporting of leaks



Fig. 3: Application example

- 1 Red: Measurement line
- 2 Green: Exhaust line
- 3 Transparent: Suction line
- 4 Electrical connection
- 5 Condensate trap
- 6 Tank vent
- 7 Liquid barrier
- 8 Outer tank wall
- 9 Interstitial space



Fig. 4: Eurovac in protective housing, without (**A**) or with heating (**B**), pre-assembled and ready to be connected. The horn is connected to the output relay. Protection IP 55.

- 1 Horn HPW 2
- 2 Mute button for horn HPW 2
- 3 Eurovac
- 4 Protective housing

- 5 Red: Measurement line
- 6 Green: Exhaust line
- 7 Transparent: Suction line
- 8 Heating controller
- 9 Heating

## 4 Technical specifications

#### Table 1: Technical specifications

Parameter	Value
General specifications	
Weight	1.1 kg
Emissions	The A-evaluated sound level of the au- dible alarm is at least 70 dB(A) at a dis- tance of one metre.
Output relay	1 changeover contact
Breaking capacity output relay	Max. 250 V, 2 A, resistive load
Relay fuse	Τ 2 Α

Parameter	Value
Operating pressure in interstitial space	Approx60 to -85 mbar
Switch point Alarm On	-35 to -44 mbar
Switch point Alarm Off	-50 mbar (point of reference, results from switching hysteresis)
Switch point Pump On	-65 mbar (point of reference, results from switching hysteresis)
Switch point Pump Off	-75 to -85 mbar
Connecting hose	PVC hose 6 x 2 mm
Temperature range	
Ambient	-5 °C to +50 °C
Storage	-25 °C to +60 °C
Voltage supply	
Nominal voltage	AC 100-240 V ± 10 %
Rated power	< 10 VA
Electrical safety	
Degree of protection	Π
Protection	IP 30
Mode of operation and additional mode of op- eration	Type 1.B
Electromagnetic compatibi	lity (EMC)
Interference	According to CISPR 22
Noise immunity	According to EN 61000

#### 4.1 Approvals, tests and conformities

Eurovac NV complies with the EMC Directive (2004/108/EC), the Low Voltage Directive (2006/95/EC), the Construction Products Directive (89/106/EEC) and has the Technical Approval of the German Institute for Building Technology Z-65.22-382.

## 5 Transport and storage

#### CAUTION Damage to the device due to improper transport.

- Do not throw or drop the device.
  - Protect from wetness, humidity, dirt and dust.

#### CAUTION Damage to the device due to improper storage.



Protect from wetness, humidity, dirt and dust.

## 6 Mounting and commissioning

The leak detector may only be installed and commissioned by a specialised company, see chapter 2.4, page 6.

#### 6.1 Preparing mounting

#### **Basic vacuum**

The vacuum pump of the leak detector must not exceed the pump capacity of 100 l/h.

 Generate a vacuum of approx. 400 mbar in the interstitial space. Use an installation pump with a greater capacity for this purpose.

#### Leak test

- Check for leaks in the interstitial space.
- A slight pressure drop in the first hour is unavoidable. After that, there should be no noticeable pressure loss.

#### Adaptation

Reduce the vacuum in the interstitial space to -90 mbar. If the vacuum is greater when the leak detector is connected, the measuring system may be damaged or destroyed.

### 6.2 Installation site

- Choose an installation site that is as close as possible to the tank to be monitored. The ambient temperature specified must not be exceeded.
- Mount the leak detector to an even, rigid and dry wall at eye level.
- The leak detector must be accessible and easy to oversee at all times.
- The leak detector must not be exposed to water or splash water.
- Do not mount the leak detector in damp rooms.
- The leak detector must not be installed in hazardous areas or in access chambers of underground tanks.
- If the case of outdoor applications, the leak detector must be mounted in a protective housing with IP 55 protection. If the leak detector is installed in a protective housing, an additional weather-proof audible alarm must be installed outside of the protective housing. See chapter 11, page 25 for accessories.
- If the leak detector is installed below rooftops or in rooms that are only partially closed, protect it against direct atmospheric influences or use a protective housing as mentioned above.

### 6.3 Installing the leak detector

1. Fasten the leak detector the wall (use **A** or **B**), a drilling template is included.



## 6.4 Electrical connection

- Mains voltage is interrupted and cannot be switched on by accident.
- Connect the leak detector directly to the supply network without a switch and without a plug!
- If you want to route the mains or relay cable trough the top of the housing, replace the rubber grommet at the top of the housing by the enclosed cable gland.
- Close any cable glands at the bottom of the housing that are not used by means of the enclosed plugs.



- 1 Pressure switch
- 2 Pump
- 3 Cable routed through upper cable gland
- 4 Cable routed through bottom cable gland
- 5 Relay fuse
- 6 Relay connection
- 7 Mains connection

Fig. 5: Electrical connection

#### **Power supply**

Connect the leak detector to mains by means of a permanently installed cable such as NYM-J 2 x  $1.5 \text{ mm}^2$ .

- 1. Route the mains cable through the upper or bottom cable gland into the leak detector.
- 2. The phase must be connected to terminal L1, the neutral conductor to terminal N. The leak detector supply cable must have a separate fuse (max. 16 A).

#### Output

The output signal of the leak detector is made available via a voltage-free relay contact (1 changeover contact).

Permanently install the relay cable, route it through the upper or bottom cable gland into the leak detector and connect it to the terminals with the corresponding designations. Safely isolate the relay cable. The isolation characteristics of the relay cable must at least comply with IEC 60227 or IEC 60245.

If no error condition is present, the relay is de-energised. In the case of an alarm, the relay is energised.

## CAUTION

Destruction of the switching contact and adverse effects on the function of electrical systems due to voltage peaks when inductive consumers are switched off.

 Use commercially available standard RC combinations such as 0.1 µF/100 Ohm for inductive consumers.

#### 9 V battery for alarm in the case of power failure

If a standard 9 V battery is connected, an alarm sound is activated in the case of a power failure. The alarm sound cannot be muted; it remains on until mains power is available again. When mains power is available again, the device immediately resumes operation. If a leak has occurred in the meantime, this is indicated.



#### 6.5 Hose connections

Hoses from the leak detector to the tank to be monitored, see also fig. 3, page 9.

1. Use oil- and water-resistant plastic hoses **6 x 2 mm** for the measurement hose (red), the suction hose (transparent) and the exhaust hose (green).

When the leak detector of existing systems is replaced, you may also use  $4 \times 2$  mm provided such hoses had been used before the leak detector is replaced.

The hose connection pieces of the device are designed for  $4 \times 2 \text{ mm}$  and  $6 \times 2 \text{ mm}$  hoses.



- 2. The hoses must have the full cross section over the entire length, there must be no bends and indentations.
- 3. The hoses should have a steady gradient from the device to the tank.

In the case of outdoor tanks, install the hoses with a steady gradient of 4 %.

- 4. If a steady gradient to the tank cannot be maintained, install a condensate trap at the lowest point.
- 5. Do not fit any shut-off elements.
- 6. In the case of underground or outdoor installation of the hoses, route the hoses through impact-resistant and weather-proof protective pipes.
- 7. Connect the measurement hose to the measurement connection of the tank.
- Connect the exhaust hose to the tank vent pipe. If an AFRISO Euroflex withdrawal system is used, the exhaust hose can be directly connected to the Euroflex return connection in the case of single-line operation.
- 9. Connect the suction hose to the suction connection of the interstitial space. A liquid barrier must be installed in the suction hose. The liquid barrier must be mounted vertically, e.g. at the manhole cover.
- 10. In the case of connection to aboveground tanks, the hose connections should be secured by means of hose clamps.





#### Valve settings 6.6

Valve setting	Measurement valve at red measurement line connection	Test valve at white suction line connection
	Normal operation	Normal operation
	Test with pressure gauge	Venting
	Not permissible	Not permissible

#### 6.7 **Commissioning the device**

- $\mathbf{\nabla}$ The leak detector has been installed as per chapter 6.3, page 14.
- $\checkmark$  The electrical connection has been made as per chapter 6.4, page 15.
- $\mathbf{N}$ Both valves are in the setting "Normal Operation".





Measurement valve (red connection)

Test valve (white connection)



✓ Interstitial space is under vacuum.

 $\mathbf{N}$ Interstitial space has been checked for leaks.

- ✓ Vacuum in the interstitial space has been reduced to 90 mbar.
- $\checkmark$  Leak detector has been connected to the interstitial space.
- $\checkmark$  Liquid barrier has been installed.
- Leak detector housing has been closed with screws.
- 1. Switch on the power supply via the on-site mains fuse.
- ♦ The green LED "Supply ON" lights up.

Solution The pump controller ensures the operating vacuum is available. Once the set vacuum is reached, the pump of the leak detector switches off.

- The system is now ready for operation.
- Have the specialised company certify the installation, commissioning and test of the leak detector, see chapter 16.1, page 27.

#### 7 Operation

The leak detector monitors double-walled tanks. If a leak occurs, the vacuum in the interstitial space drops and the leak detector generates an alarm. The operation of the leak detector is therefore limited to its regular monitoring:

- The green LED "Supply ON" is on.
- The red LED "Alarm" is not on.
- The audible alarm is off.

### 7.1 Alarm condition

- The red LED "Alarm" lights up and the audible alarm is activated.
- 1. Press the button "Mute" to mute the audible alarm.
- ✤ The red LED "Alarm" remains on.
- 2. Immediately notify the installation company.
- 3. When the problem has been fixed, you must perform a full function test as per chapter 7.2, page 19.

#### 7.2 Function test

- The function of the leak detector must be tested each time it is commissioned and at least once per year by an expert and after each alarm and troubleshooting activity.
- 2. Create a test report after each function test and keep it along with the other documents for the leak detector.

The pressure switch integrated in the leak detector and the overpressure safety valve may only be adjusted and calibrated by the manufacturer or by trained staff.

#### Function test by simulation

1. Set the test valve (white connection) to position "Vent".



- Air is supplied to the interstitial space of the tank.
- ✤ The vacuum in the interstitial space drops and the leak detector triggers an alarm.
- 2. Set the test valve (white connection) to position "Normal Operation".



- The vacuum in the interstitial space is regenerated.
- The alarm signals must switch off automatically.

#### Function test by measurement

The lateral connection of the red measurement valve is provided for connecting a vacuum gauge to test the system.

- 1. Connect a vacuum gauge (0-100 mbar).
- 2. Set the measurement valve (red connection) to position "Test".



- b The gauge indicates the vacuum in the interstitial space.
- 3. Set the test valve (white connection) to position "Vent".



- $\checkmark$  The vacuum drops slowly.
- 4. Observe the gauge and record the pressure values at which the pump and the alarm signals are switched on.
- 5. Set the test valve (white connection) to position "Normal Operation".



- 6. Compare the recorded values to the set values.
- 7. Set the measurement valve (red connection) to position "Normal Operation".



8. Disconnect the vacuum gauge.

#### Function test of the indicators

- Press the "Test" key.
- The green LED "Operation", the red LED "Alarm" and the yellow LED "Service" light and the audible alarm is activated. The audible alarm can be muted by means of the button "Mute".

## 8 Maintenance

A leak detector is safety equipment that may only be repaired by a specialised company, refer to chapter 2.4, page 6.

If required, close a maintenance agreement with a specialised company.

#### 8.1 Service indication

The leak detector features an integrated service indication. When annual maintenance is required, the yellow LED "Service" flashes and the audible alarm sounds for approx. 1 second once per hour.

- 1. Press the button "Mute" to mute the audible alarm.
- ✤ The LED "Service" lights solid yellow.
- 2. Have the annual maintenance performed by a specialised company.



### 8.2 Maintenance activities

#### Annual maintenance

- Function test by simulation of alarm condition, see chapter 7.2, page 20.
- Check and drain the condensate trap at the leak detector and the condensate traps installed in the hoses (if applicable). Replace the filter in the non-return valve and tightly screw the condensate trap back into the housing.
- If a 9 V battery is fitted for alarm in the case of power failure, replace the battery.
- Make sure that the leak detector and its environment are clean, accessible and easy to oversee.

#### Replacing the relay fuse F1

- Mains voltage is interrupted and cannot be switched on by accident.
- 1. Remove the upper part of the housing.
- 2. Remove the transparent cover from the fuse.
- 3. Replace the mains fuse F1: T 2 A.
- 4. Snap the transparent cover onto the fuse.
- 5. Connect the flat cable to the connector.
- 6. Refit the upper housing part and screw it to the base.
- 7. Switch on the mains voltage.

## 9 Troubleshooting

Δ

Repairs may only be performed by a specialised company, refer to chapter 2.4, page 6.

Table	2:	Troub	lesh	ooting
-------	----	-------	------	--------

Problem	Possible reason	Repair	
Green LED "Supply ON" is not on.	No mains voltage available.		Check mains voltage.
Red LED "Alarm"	Leak.		Check hoses.
lights up.			Notify the installation company.
	Test/measure- ment valve in position "Test/Vent".		Set the test valve and the measurement valve to position "Normal Operation".
	Condensate trap open.		Close the conden- sate trap.
The yellow LED "Service" flashes.	Annual mainte- nance required.		Perform annual main- tenance, see chap- ter 8.1, page 21.
Water in conden- sate trap.	-		Drain the condensate trap.
Filter polluted.	-		Replace filter.
Other malfunctions	-		Send the device to the manufacturer.

### 9.1 Evaluation of the pump operating time

The installer can display the pump operating time by pressing the button "Test" of the device to easily come to a conclusion concerning the tightness of the entire system.

- Keep holding down the button "Test".
- After 5 seconds, the green LED of the foil keypad indicates the pump operating time.



The LED provides information on the last 5 days. The pump operating time is indicated as a total. A flash of one second of the LED corresponds to a pump operating time of a **total** of one day during the last five days.

If the LED lights up very briefly, this indicates that the pump operating time during the last five days was proportionally shorter.

If you open the device, the yellow LED on the printed circuit board always displays the pump operating time ( $\mathbf{A}$ ) (you do not need to press the button "Test" for this LED to display the pump operating time).



## 10 Shutting down, disposal

- 1. Switch off the supply voltage.
- 2. Dismount the device (see chapter 6, page 12, reverse sequence of steps).



3. To protect the environment, this device must not be disposed of together with the normal household waste. Dispose of the device according to local directives and guidelines.

This device consists of materials that can be reused by recycling firms. The electronic inserts can be easily separated and the device consists of recyclable materials.

If you do not have the opportunity to dispose of the used device in accordance with environmental regulations, please contact us for possibilities to return it.

## 11 Spare parts and accessories

Part	Part no.
Audible alarm, weatherproof	61012
Alarm lamp, weatherproof	61015
Condensate trap bar, triple	43692
PVC hose 6 x 2 mm, 100 m, red	43662
PVC hose 6 x 2 mm, 100 m, green	43663
PVC hose 6 x 2 mm, 100 m, transparent	43664
PVC hose 4 x 2 mm, 100 m, red	43648
PVC hose 4 x 2 mm, 100 m, green	43649
PVC hose 4 x 2 mm, 100 m, transparent	43650
Pump for Eurovac NV	43783
Pressure switch for Eurovac NV	43787
Non-return valve	43605
Event reporting system Phone Alarm SD1	90003
Event reporting system GSM Alarm	90002
EMS 220 event reporting system	90220
EMS 442 event reporting system	90442
Hose clamp 7-11 mm	810 000 0004
RC combination 0.1 $\mu$ F/100 $\Omega$	618 001 5100
Relay fuse T 2 A	960127 2000

## 12 Warranty

The manufacturer's warranty for this product is 24 months after the date of purchase. This warranty shall be good in all countries in which this device is sold by the manufacturer or its authorised dealers.

## 13 Copyright

The manufacturer retains the copyright to this manual. This manual may not be reprinted, translated, copied in part or in whole without prior written consent.

We reserve the right to technical modifications with reference to the specifications and illustrations in this manual.

## 14 Customer satisfaction

Customer satisfaction is our prime objective. Please get in touch with us if you have any questions, suggestions or problems concerning your product.

#### **15 Addresses**

The addresses of our worldwide representations and offices can be found on the Internet at <u>www.afriso.de</u>.

## 16 Appendix

 $\overline{\wedge}$ 

### 16.1 Certificate of expert

This is to certify that the leak detector was installed, commissioned and function-tested in accordance with these operating instructions:

Pump Off:	_mbar, Pump ON:	mbar
Alarm ON:	_ mbar, Alarm OFF:	mbar
Pressure drop entire system:	mbar inmi	nutes
Tank as per standard		
Year of manufacture:	, litres:	
Factory no.:	, O aboveground, O underg	round
Tank manufacturer:		
Specialised company:		
Owner/operator:		
Location of system:		

Date, signature

## 16.2 Approval documents

	DIBt	-	DIBt
Bescheid	Deutsches Institut für Bautechnik anstalt des öffentlichen rechts	Besche Z-65.22	ld über Ergänzung ⊳382
über die Ergänzung der allgemeinen bauaufsichtlichen Zulassung vom	Zutassungsstelle für Bauprodukte und Bauarten Bautechnisches Pröfamt Tiechniche Zutassunoon (517 Aund der Einchlischen Union		I. ALLGEMEINE BESTIMMUNGEN
29. Juli 2004	für das Agröment im Bauwesen UEAtc	Die Alle folgende	gemeinen Bestimmungen der allgemeinen bauaufsichtlichen Zulassung werden durch e Bestimmungen ersetzt:
	Tel: +49 30 78730-0 Fax: +49 30 78730-320 EMait: dith:@dith: de	1	Mit der allgemeinen bauaufsichtlichen Zulassung ist die Verwendbarkeit bzw. Amwendbar- keit des Zulassungsgegenstandes im Sinne der Landesbauordnungen nachgewiesen.
	Datum: Geschäftzetichen: 29. Januar 2010 I 56-1.65.22-69/09	7	Sofern in der aligemeinen bauaufsichtlichen Zulassung Anförderungen an die besondere Sachkunde und Erfahrung der mit der Henstellung von Bauproduten und Baurten betrauten Personn nach den § 1,2 Abs. 5. Musterbauordhung entsprechenden Länderrege- lungen spestellt werden, ist zu beachten, dass diese Sachkunde und Erfahrung auch durch
Zulasunganumer: <b>Z-65.22-382</b>	Gellungsdawer bis: <b>31. Juli 2014</b>		gleichweftige Nachweise anderer Mitgliedstaaten der Europäischen Union belegt werden kann. Dies gift ggf. auch für im Rahmen des Abkommens über den Europäischen Wirt- schaftsraum (EWR) oder anderer bilateraler Abkommen vorgelegte gleichwertige Nach- weise.
Anragsteller: <b>Afriso-Euro-Index GmbH</b> Lindenstraße 20, 74363 Gügling	5	m	Die aligemeine bauartsichtliche Zulassung ersetzt nicht die für die Durchführung von Bauvorhaben gesetzlich vorgeschriebenen Genehmigungen, Zustimmungen und Beschei- nigungen.
		4	Die allgemeine bauaufsichtliche Zulassung wird unbeschadet der Rechte Dritter, insbe- sondere privater Schutzrechte, erteilt.
Zulasurgsgegeneard:		Ŋ	Hersteller und Vertreiber des Zulassungsgegenstandes haben, unbeschadet weiter ge- hender Regelungen in den Besonderen Batemmungen. Dem Verwender des Zusungsgegenstandes Kopien der aligemeinen bauaufsichtlicher Zulas- verfügung zu stellen und daaren frinzuwisien, dass die aligerneine baueischichte. Zulas- sung an der Verwenderwendenstein von Wartigung sind den befeiligen Behörden Kopien der aligerneine baueischichte. Zulas- sung and der Verwendersteinen baueischichten Zulassung zur Verfügung zu stellen.
Lectanzeiger nach dem Unterdrucksystem des ' "Eurovac NV"	yps "LAZ-04/3" und des Typs	φ	Die allgemeine bauaufsichtliche Zulassung darf nur voliständig vervielfähigt werden. Eine auszugsweise verförmtichning bedarf der Zustimmung des Deutschen instituts für Bautechnik. Texte und Zeichnungen von Werbeschriften dürfen der allgemeinen bauauf- schritchen Zulassung nicht vuldespreichen. Überstätztnen ben die schritchen Zulassung missen den Hinweis "vom Deutschen Institut für Bautechnik nicht geprüfte Übersetzung der deutschen Onginalfassung" enthalten.
		~	Die allgemeine bauaufsichtliche Zulassung wird widerruflich erteilt. Die Bestimmungen der allgemeinen bauaufsichtlichen Zulassung können nachträglich ergart und andert werden, insbesondere, wenn neue technische Erkenntnisse dies erforden. Un
Dieser Bescheid ergänzt die allgemeine bauaufsichtli 29. Juli 1300-V verlängert durch Bescheid vom 25. Jur 29. Juli 1300-V verlängert durch Bescheid vom 25. Jur beuestischritten Zulassung und dar frur zusammer Bemerkung: Ergänzt wird der Typ "Eurovac NV" Die Deutsches Institut für Bautechnik   Env von Bund und dar Deutsches Institut für Bautechnik   Env von Bund und dar Die I jokonneuringe 30. L  D-10239 Beinin   Ta; + 443.0. 78730	Re Zulassung Mr. 2-65-22-382 vom the Zulassung Mr. 2-65-22-382 vom mr. 40 oct genannten allgemeinen mr. 40 oct genannten allgemeinen mr. 40 oct verdet. r. Baurechnis r. Baurechnis		Deuteches Institut

Λ

	DIBt		DIBt
Bescheid über Ergänzung Z-65.22-392	<b>Seite 3 von 4  </b> 29. Januar 2010	Bescheid über Ergänzung Z-65.22-382	<b>Seite 4 von 4</b>   29. Januar 2010
ZU II. BESONDERE E Die Besonderen Bestimmungen der allgemeinen b erdänt-	<b>3ESTIMMUNGEN</b> bauarfsichtlichen Zulassung werden wie folgt	Abschnitt 5 erhält folgende Fassung: 5 Bestimmung für Nutz rende Prüfung	ung, Unterhalt, Wartung und wiederkeh-
<ul> <li>Abschnitt 1 erhält folgende Fassung:</li> <li>Abschnitt 1 erhält folgende Fassung:</li> <li>Zulassungsgegenstand und Anw</li> <li>(1) Gegenstand dieser allgemeinen bauau</li> <li>(1) Unterdrucksystem des Tyze<sup>3</sup> "bz-204"</li> </ul>	<b>rendungsbereich</b> sichtlichen Zulassung sind Leckanzeiger nach 3° bzw. Eurovac NV <sup>or</sup> nit einem Alamfördröck-	Der Leckanzeiger Typ "LAZ-04 und der Leckanzeiger vom Typ jeweiligen Betriebsaneitung (an gind für den Typ "LAZ-04/3" im 9 der Jeweiligen Betriebsaneitun Die Betriebsaneitung des Leckan	13" muss entsprechend den Abschnitten 4.2, 4.3 und 4.5 "Eurovas. N.C. Pertsprechend den Abschnitten 7 und 8 der ehe fühndez 2) betrieben und gewartet werden. Störungen Abschnitt 4.4 und für den Typ "Eurovac NV" im Abschnitt og beschrieben.
statikent von3 ± 5 mbar mit integreter (2) Die Leckanzeiger dürfen an geeignete ( zum Legern, Abfülen und Umschlagen Flammpunkt über 55 °C angeschlossen w Anlage 1).	m Untertruckerzeuger Dberwachungsräume von Behältern für Anlagen wassergefährdender Flussigkeiten mit einem verden (Aufbau des Leckanzeigegerätes siehe	Alle hier nicht aufgeführten Abschnit 29.07.2004 gelten ebenfalls für den Die Anlage 1 der allgemeinen ba	te der allgemeinen bauaufsichtlichen Zulassung vom Leckanzeiger Typ "Eurovac NV". uaufsichtlichen Zulassung wird ersetzt durch die
<ol> <li>Gelgrete Überwachungsräume im Si von Beblättern aus meralischen und nicht schrzauskieldung mit bauarkischtfichem schrzauskieldung mit bauarkischtfichem schrackarken Dierwachungsrau gebenen Alammausckshaltwert sichergaster (4) Mit dieser aligemeinen bauaufsichtliche sicherheit (ez Zubsaugsgegerstandes mit (5) Die aligemeine bauaufsichtliche (5) Die aligemeine bauaufsichtliche zubass</li> </ol>	me von Absatz (2) sind Überwachungsräume Verwendbarkeitsnachweis geblidet werden, Merwendbarkeitsnachweis geblidet werden, m die Atarmgabe bei dem im Absatz (1) ange- lit ist. Zulassung wird der Nechweis der Funktions- siner von Nabsart (1) erbracht. ung wird unbeschalet der Pruf- oder Gereimi-	ergänzte Anlage 1 dieses Bescheids. Eggert	Bestabert
gungsorbalte andres Rechtsberiche 1 gungsorbalte andres Rechtsberiche 1 setz - Niederspanungsverondnung -, Gess von Gestein - EMVG -, 11. Verondnung zu verondnung -) entellt (6) Durch diese allgemeine bauaufsichtlic (5) Durch diese allgemeine bauaufsichtlic des WHG <sup>1</sup> .	L: Verordnug zum Gerächschneitige- tz über die elektronnspretische Verträglichkeit m Gerätesicherheitsgesetz - Explosionsschutz- zhe Zulassung entfallen für den Zulassungs- deststellung und Bauartzulassung nach § 19 h h bauarfsichtlichen Zulassung (siehe Seite 1)		n national
Der Leicht stur die Verwendung im Sinne der Spä Abschnitt d., Bestimmungen für die Ausführung, 4.1 (1) Der Leckanzelaer 700 "LAZ-0473" mug.	teren Nutzung. teren Nutzung. Sabazt 4.1(1) erhält folgende Fassung:		
At 1 and etc. References wort for the more Bertelesseletures' and service of the service Instandanter, Instandestour und Reinger beauftragt werden, die für diese Tatigkeitig	the processing of the processi		
<ol> <li>WHG:19 August 2002; Gesetz zur Ordnung des Wasse Bertriebsandetung für den Leokanzeiger "Typ. Fürword geprüfte Berriebsandetung für den Leokanzeiger "Typ. Ix)</li> </ol>	haushats (Waserhaushiltgesett) 18.º von Oktober 2009 auf Grundlage der von TÜV-Nord 2.64/3.Druckstand 11/02.		

 $\square$ 

#### Appendix

HES INSTITUT FÜR BAUTECHNIK Anstat des öffentlichen Rechts	10829 Bertin 29. Juli 2004 Kolomenstrates 30. Teetern 209 20320.354 Teeters 209 01232.320	Geentz: III 14-1 65:22-7703 emeine bauaufsichtliche Zulassung		Z-65.22-382	Afrise-Euro-Index GmbH Lindenstraße 20	74363 Gügingen teckarzeiger nach dem Uhterdrucksystem des Typs LAZ-04/3 nd: Leckarzeiger nach dem Uhterdrucksystem des Typs LAZ-04/3	31. Juli 2009	lassungsgegenstand wird hiermit allgenein bauaufsichtlich zugelassen. utsichtliche Zulassung umfasst fünf Seiten und zwei Blatt Anlagen.					
DEUTSCH		Allge	)	Zulassungsnummer:	Antragsteller:	Zulassungsgegensta	Geltungsdauer bis:	Der oben genannte Zu Diese allgemeine baua					
DIBt	Deutsches Institut für Bautechnik ANSTALT DES OFFENTLICHEN RECHTS Zufstangestelle für Bauppolichts und Baurten Remonderten beiten	e autocontense protunte Migged der Europätischen Granation für Technische Zuhansungen E.O.N. and der Europätischen Union Eur das Agefenert im Bauwesen U.E.Ats	Tel:: +49 30 78730-0 Fax: +49 30 78730-320 E-Maii: dibt©dibt de	Datum: Geschäftszeichen: 25. Juni 2009 I 56-1.65.22-12/09	Geitungedauer bie: 31. Juli 2014	lingen			is Type LAZ-04/3	algemeinen bauaufsichtlichen Zulassung bid umfasst eine Selte. Er gilt nur in bauaufsichtlichen Zulassung und dar nur	Besejeubiet Doutedes Institut Ant Baurednik	Landern gementsam getragene Einnehung 1730-0   Far: +4430 78730-320   E.Mai: dibligidibi.da   www.dbi.da	
	Bescheid über die Verlängerung der Geltungsdauer	der allgemeinen bauaufsichtlichen Zulassung vom 29. Juli 2004			Zuhasunganumme:: <b>Z-65,22-382</b>	Aniragateller: Afriso-Euro-Index GmbH Lindenstraße 20, 74363 Gigli		Zulassungagegenstand:	Leckanzeiger nach dem Unterdrucksystem de	Dieser Bescheid verlängert die Geltungsdauer der z Dieser Bescheid verlängert die Geltungsdauer der z Verbindung mit der obein genannten allgemeinten b zusammen mit dieser verwendet werden.	Eggert	Deutsches Institut für Bautechnik   Eine von Bund und den I. DIBt   Kolomenstraße 30 L   D-10229 Berlin   Teil: +43 30 737	

Λ

Seite 3 der allgemeinen bauaufsichtlichen Zulassung Nr. Z-65.22-382 vom 29. Juli 2004	II. BESONDERE BESTIMMUNGEN	1 Zulassungsgegenstand und Anwendungsbereich	<ol> <li>Georstand operal angementarin bauduscriptor handlascriptor and dem Uniterducksystem des Type LZ-043 mit eines ung sind Lockarabeit von 39 ± 5 marr mit regertem Undertuckerzugen, einen</li> <li>Diel Leckarzeiser dirfen an geeinnete Üherwachningstame von Rahalten für Angenen</li> </ol>	<ol> <li>La construction of the state of</li></ol>	von Behätern aus medischer und nörung von Verkstoffen, die durch eine Bau- von Behätern aus medischer und inführeidlischer Werkstoffen, die durch eine bau- aufsichtich zugelassene Leofoschutzauskleichung geblieft werden, wem für den jeweiligen Dberwahungsaum die Alarmgabo bei dem im Abschnift 1.1 angegebenen Alarmdruck- schaftwert sichergestellt ist.	<ol> <li>Mit dieser allgemeinen bauardischtlichen Zulassung wird der Nachweis der Funktions- sichenheit des Zulassungsgenstandes im Sinne von Abschnitt 11 erbracht.</li> <li>Die allgemeine bauerücklichter Zulassung und unbeschadet der Prüf- ader Genehmi- numschehelballa anderer Bechkhenreihe i/R 11 Verrnheim zim Gerähschenheitena-</li> </ol>	<ul> <li>Ste<sup>2</sup> Niederspanungsverordnung, Gesetz über die elektromagnetische Verträglichkeit verordnung in eine Nach 11. Verordnung zum Geräteschentellegesetz- Exposionsschutz- verordnung intelli.</li> <li>B. Durch diese allgemeine bauerköntliche Zulassung entallen für den Zulassungsgegen- stand die wasserrechtliche Eigeungsfeststellung und Bauartzulassung nach § 19 h des Wasserhaushaltsgesetzes (WHG)<sup>1</sup>.</li> </ul>	2 Bestimmung für das Bauprodukt	2.1 Eigenschaften und Zusammensetzung 2.1.1 Eine Undichheit in den Wänden des Überwachungsnaumes wird durch einen Druckan- stieg von 60 bis 100 mer Unterduck auf den Alamdhuckschaftwert von 39 ± 5 mbar Unterduck zur konstisch anorszeict	2.1.2 Der in einem schlagfesten Kunststoffgehäuse eingebaute Leckarzeiger vom Typ LAZ 04/3, der bei Montage im Freien in einem Schutzgehäuse der Schutzart IP 55 mon- tiert wich, besteht aus den Präzeige- und Bedheießenneten, einer Unterduckgrunpe, einem Dirkschalter einer Laikentalten mit den plektrinkerben Kommonenten zur Anho-	2.1.4 Der Nargestragenster Sindersternen Ruckrischlagventil mit Schmutzfriefer, einem Kurforden returg schreiden Schäuchsternen und Schlauchsternen und Schauchsterkein einem Kurforten zugefällt und der Furkkönsteichen für der Sung-Neisen und Ausprüfelkungen.	Abschnitt 11 wurde nach den 72 ulassungsgrundsatzen für Leckanzeigegeräte für Erhal- ter (2G-LAGB) des Deutschen Instituts für Bautechnik vom August 1994 entracht.	Reacon	<sup>1</sup> Geediz zur Ordrung des Wasserhaustiellts (Wasserhaustiellsgeseiz-WHG) von 19 August 2002	
Sette 2 der allgemeinen bauaufsichtlichen Zulassung Nr. Z-65.22-382 vom 29. Juli 2004	I. ALLGEMEINE BESTIMMUNGEN	1 Mit der allgemeinen bauaufsichtlichen Zulassung ist die Verwendbarkeit bzw. Anwendbar- keit des Zulassungsgegenstandes im Sinne der Landesbauordnungen nachgewiesen.	2 Die allgemeine bauaufsichtliche Zulassung ersetzt nicht die für die Durchführung von Bau- vorhaben gesetzlich vorgeschriebenen Genehmigungen, Zustimmungen und Bescheini- gungen.	3 Die algemeine bauaufsichtliche Zulassung wird unbeschadet der Rechte Dritter, insbesohene privater Schutzrechte, ertellt.	4 Hersteller und Vertreiber des Zulassungsgegenstandes haben, unbeschadet weiter gehender Regelungen in den "Besonderen Bestimmungen", dem Verwender bzw. Anwender des Lugssungsgegenstandes Kopein der Eigemeinen Dausförstinkben Zulassungsgegenstandes Andran frimmeinen dere die alloraneinen Annaufe	zuressong zur vergevg zu streien un und nut miczwessen dass vera endernene undauf- sichtlichs Zulassung an der Verwendungstelle vorliegen muss. Auf Anforderung sind den beteiligten Behörden Kopien der aligemeinen bauaufsichtlichen Zulassung zur Verfügung zu stellen.	5 Die allgemeine bauaufsichtliche Zulassung darf nur vollständig vervieffaltigt werden. Eine auszugsweise Verörteindrung beadt der Zustammung des Deutschen instruks für Bau- lechnik. Taska und Zeichnungen von Werbeschriften dürfen der allgemeinen bauaufsicht- intenen Zulassung micht widerstrechen. Überschungen der allgemeinen bauaufsichtlichen Zulassung müssen den Hinweis "Vom Deutschen Institut für Baudechnik nicht geprüfte Übersetzung der deutschen Orginaffassung" enthalten.	6 Die allgemeine bauaufsichtliche Zulassung wird widerruflich erteilt. Die Bestimmungen der allgemeinen bauaufsichtlichen Zulassung können nachträglich ergänzt und geändert	warden, inspesondere, wenn heue technische Erkenhninsse uns androem.	Deutsches Institut für Bautechnik	)				

 $\square$ 

#### Appendix

Seite 5 der allgemeinen bauaufsichtlichen Zulassung Nr. Z-65.22-382 vom 29. Juli 2004	3 Bestimmungen für den Entwurf	3.1 Die Sicherstellung der Alarmgabe des Leckanzeigers ist für die Überwachungs- raumgeomethe und die Dichte der Lagerflüssigkeit nach Abschnitt 7.3.2 der DIN IN 13160-2 <sup>2</sup> harztzweisen.	3.2 Die Lockanzeger durfen nur an Behaltern verwendet werden, die mit einer Saugleitung ausgerücklet sind, die zum Terfonunkt des Überwachungsraurnes führt, und deren Lage- nissiekkeine werder zur Dichtfüssioken noch zu Feststorfausscheidunden neben.	<ol> <li>Der Leckanzeiger ist nur an Behaltem zur Lagerung wassergef</li></ol>	sein	4.1 (1) Der Leckanzeiger muss entsprechend der Abschnitte 3.3 und 3.4 der Betriebsanlei-	turg's engebau rul entspretend deen Abstrint 4.1 in the sterb genomen werden. Mit dem Erbusen, Instandalten, Instandsetzen und Reinigen des Leckarzeigens durfen nur solche Berniebe beaufragt werden, die für diese Tatigbeiten Fachbetriebe im Sinne von § 19 I Wassenhausleitigsetzt (WHG) sind.	nach landesrechtlichen Vorschiften von der Fachertiebspflicht ausgenommen sind oder der Hersteller Ges. Lexkanzeigens der Tätigkeiten mit eigenem sachkundigen Personal ausführt. Die arbeitsschutzrechtichen Anförderungen beltehen unberührt. (3) Der Leckanzeiger darf nicht in explosionsgefährdeten Bereichen eingebaut werden.	5 Bestimmung für Nutzung, Unterhalt, Wartung und wiederkehrende Prüfung	Der Leckanzeigens muss entsprechend der Abschnitte 4.2 und 4.3 der Betriebsanleitung betrieben und entsprechend Abschnitt 4.2 der Betriebsanleitung gewartet werden. Störungen sind im Abschnitt 4.4 der Betriebsanleitung beschrieben. Die Betriebsanleitung des Leckanzeigens ist vom Hersteller mitzuliefen.		Ur-Ing. Kaming Dutada haring far Baucolari	7			
beite 4 der allgemeinen bauaufsichtlichen Zulassung Nr. Z-65.22-382 vom 29. Juli 2004	2.2 Herstellung und Kennzeichnung	2.2.1 Herstellung Der Leckanzeiger darf nur im Werk des Antragstellers hergestellt werden. Er muss hinschritich Bauart, Abmessung und Werkstoffen den in Anlage 2 dieser allgemeinen bau- adfschritichen Zulassung aufoefinhen Unterlagen entsonzhen	2.2.2 Kennzeichnung Der Leckanzeiger dessen Verbackung oder dessen Lieferschein muss vom Hersteller mit	dem Dbeeinstimmungszeichen (J.Z.Bichan) nach den Übeeinstimmungszeichen-Veroch nungen der Lander gekennschnet werden. Die Kenneichnung darf nur eingen, wen eie Vraussetzungen nach Abschnitt 2.3 erfült sind. Derüber hinaus ist der Leckarzeiger	mit tolgenden Angaben zu versenen. - Typenbezeichnung - Zulasunsmmer	0.3 Übereinstimmungsnachweis	2.3.1 Algementes Die Bestähung der Übereinstimmung des Leckarzeigers mit den Bestimmungen dieser algemeinen bauaufschritichen Zulassung muss im Herstellenwerk mit einer Übereinstim- mungerklähung des Herstellens auf der Grundlage einer werkeigenen Proukkünskon- froije und einer Ersteprüng des Leckarzeigers durch eine hierfür anfrannte Prütstelle	ernogen. 2.3.2 Werkseigene Produktionskontrolle In Herstellerwerk ist eine werkseigene Produktionskontrolle einzurichten und durchzufüh- ren. Im Rähmen der werkeigenen Produktionskontrolle ist eine Stückprüfung jedes Leck-	anzeigers durchzuführen. Durch eine Stückprüfung hat der Hersteller zu gewährleisten, dass die Bauteile des Leckarzeigers funktionssicher sind und dem geprüften Baumuster onternechten.	Die Ergebrauten: Die Ergebrause der werkseigen Produktionskontrolle sind aufzuzeichmen un <u>d ausz</u> uwer- ten. Die Aufzeichnungen mütssen mindestens folgende Angaben enthalter – Brzeichnung des Leckarzeigers – Ardies Archielle note heimiger	Ergebnisse der Kontrollen oder Prüfung des Leckanzeigers     Ergebnisse der Kontrollen oder Prüfungen	<ul> <li>Unterschrift das für die werkseigene Produktionskontrolle Verantwortl         (Den Aufzeichnungen sind midmetens inn "Jahre autzubewahren. Sie sind den Deutschen Die Aufzeichnungen sind midmetens inn" Jahre autzubewahren. Sie sind den Deutschen Institut (in Eaudenhink und der obersten Buuaufsichtsbehönde auf Verlagen vorzulisson.</li> </ul>	Bei ungenügendem Prüfergebnis sind vom Hensteller unverzüglich die erforderlichen Matteamen zur Abselung des kangels zur fater. Levkarzergen, die dan Antoderungen indrit derfachen, sind so zu handhaben, dass sine Verwerfslung mit deren, die mit den Antoderungen der angegenennen bauaufschritten Zulassaung ubereinstimmen, ausge- schlossen ist. Nach Abstellung des Mangels sit - soweit technisch möglich und zum Nachweis der Mangelbesetigung erforderlich - die betreftende Prufung unverzuglich zu Meiderholen.	2.3.3 Ersprüfung durch eine anerkannte Prüfstelle Im Rahmen der Ersprüfung sind die in den Zuassungsgrundsätzen für Leckanzeige- greite für Behälten <sup>2</sup> aufgeführten Funktionsprüfungen durchzuführen. Wenn die der algemeinen baualsteintlichen Zussung zugendeliegeneinen Aachweise an Proben aus der Ininkhone Deraktiviten zuerkonz einen zochweitenen brittenen zu der einen Deraktiviten zussung zugenen zochweitenen brittenen Zussung zugenetienen bauelsteintlichen Zussung zugenetienen Deraktivitenen zussung zussung zugenetienen Deraktivitenen zussung zussung zugenetienen Deraktivitenen zussung zussun	der laufenden Produktion erbracht wurden, ersetzen diese Profiungen die Erstprüfung.	

	Datum           25.07.1996           01.03.1996           01.11.1997           27.01.1907           27.01.103	
	Ident-Nummer (84A) (84A) (94A) (94A) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (11U) (111)	bu oct
Anlage 2 Prűtungeunteningen Leckanzeiger Typ LAZ-04/3	Pos.         Bezelchnung           1         Beaurtulassungebescheinigung GAA Sigt LAZ-04/0 3 Machtreig           2         Beaurtulassungebescheinigung GAA Sigt LAZ-04/0 3 Machtreig           3         Prufungsschein FTB III BS (442. Xurd.)           4         Beanch des Strategebescheinigung GAA Sigt LAZ-04/0 3 Machtreig           5         Prufungsschein FTB III BS (442. Xurd.)           6         Paultussungebescheinigung GAA Sigt LAZ-04/0.3 Leachtreig           6         Paultussungebescheinigung GAA Sigt LAZ-04/0.3 Leachtreig           7         Neintreig State 142. LAZ-04/0.3 Leachtreig           8         Prufungsschein FTB III BS (442. LAZ-04/0.3           9         Beaurtralissungebescheinigung LAZ-04/0.3           10         Prüfungsschein FTB III BS (442. LAZ-04/0.3           11         TUV-Beintreigung LAZ-04/0.3           12         Rheinsbrangebescheinigung LAZ-04/0.3           13         Rheinsbrangebescheinigung LAZ-04/0.3           14         aktuelle Bertehsbrang Leckarzeiger LAZ-04/0.3           14         aktuelle Leckarzeiger LAZ-04/0.3           14         aktuelle State LAZ-04/0.3	Anlage 2 - Jun ally, Bauauts, Zulassu Z 65: 22 - 382, vom 29. T <u>ali 2</u> Deutsches Institut für Baurochnik
Lecanoroper LAZ / Eurowa:	200V	Anragstoller:       29. Januar 200 bier die meinen in territorie meinen in territori meinen interritorie meinen interrite meinen interrit

 $\square$ 

Appendix

Appendix
----------

	SVTI cesselinspektorat nspection des chaudières commandes 15, ch. 534 vaniere, tel 44 279 111, 64 044 87 8175
Wallisellen, 22. Juni 2	010
Zertifikat der Pr	odukte-Prüfung nach KVU KVU-Nr. 312.010.10
zu Anlageteilen für wa	ssergefährdende Flüssigkeiten SVTI-Nr. SM126180
Gegenstand	Niedervakuum-Leckanzeige-Gerät Typ "EUROVAC NV" mit integriertem Unterdruck-Erzeuger, Alarmschaftwert -39 ± 5 mbar
Geltungsbereich	Uberwachung von einwandigen Behältern aus Stahl oder Kunst- stoff mit Innenhölle (als Leckschutz-Auskleidung) in Anlagen zum Lagern, Abfüllen und Umschlagen wasser- gefährdender Flüssigkeiten mit Flammpunkt > 55°C
Gültigkeitsdauer	Das Zertifikat ist gülig bis zum 30. Juni 2015 und kann auf Antrag verlängert werden.
Inhaber des Zertifikates	AFRISO EURO INDEX AG Industriestrasse 9 CH - 9424 Au / SG
Hersteller	AFRISO EURO INDEX GmbH Lindenstrasse 20 D - 74363 Guglingen
Hinweise	Das Zertifikat erselzt die BUWAL-Bescheinigung Mr. 305.02.00 vom 17. Mai 2000. In der Montage- u. Betriebsanleitung, in den Prüfprotokollen sowie auf dem Geräteschild ist die neue Zertifi- katsnummer anzugeben.