




Brüel & Kjær Vibro

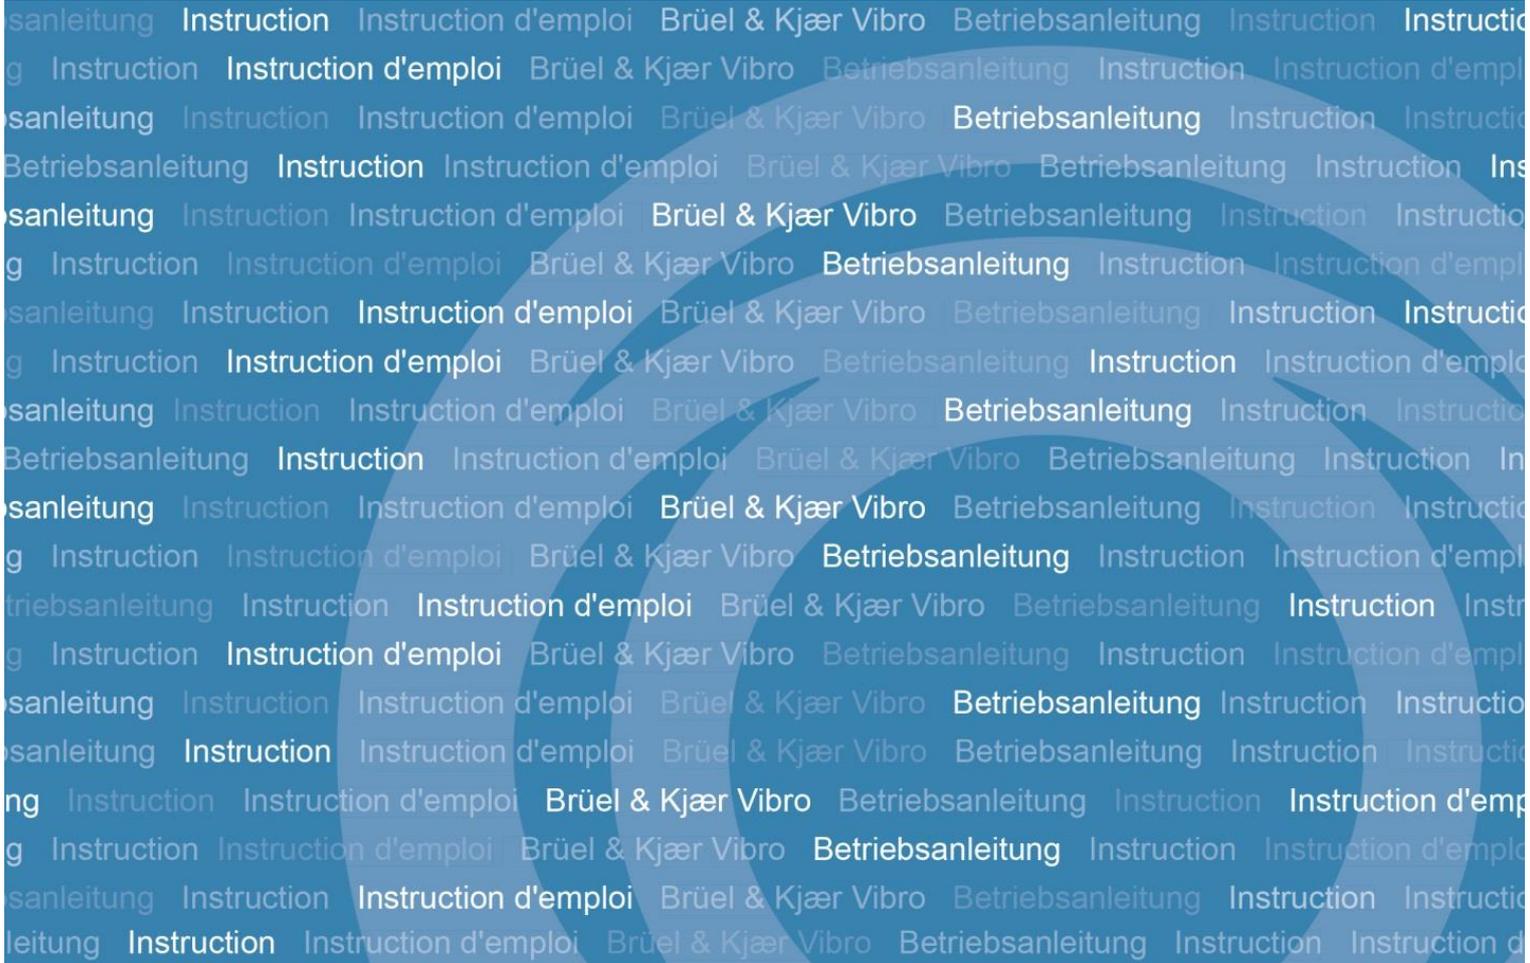

Instruction

VIBROSTORE 100

Vibration Monitoring & Analysis



Keep it accessible for future reference

Copyright © 2021 Brüel & Kjær Vibro GmbH

All rights to this technical documentation remain reserved.

Any corporeal or incorporeal reproduction or dissemination of this technical documentation or making this document available to the public without prior written approval from Brüel & Kjær Vibro GmbH shall be prohibited. This also applies to parts of this technical documentation.

Instruction **VST-100**, C107851.002 / V01, en, date of issue: 25.01.2021

Brüel & Kjær Vibro GmbH

Leydheckerstrasse. 10
64293 Darmstadt
Germany

Phone: +49 6151 428 0
Fax: +49 6151 428 1000

Hotline

Phone: +49 6151 428 1400
E-Mail: support@bkvibro.com

Brüel & Kjær Vibro A/S

Skodsborgvej 307 B
2850 Nærum
Denmark

Phone: +45 77 41 25 00
Fax: +45 45 80 29 37

Homepage

www.bkvibro.com

BK Vibro America Inc.

1100 Mark Circle
Gardnerville NV 89410
USA

Phone: +1 (775) 552 3110

Corporate E-Mail

info@bkvibro.com

Contents

1	Safety Instructions	4
1.1	Disclaimer of Liability	4
1.2	Pictograms and their Meanings	4
1.3	User Qualification	4
1.4	Intended Use	5
1.5	Recommendations to User	6
1.6	General Hints	6
2	Overview	7
2.1	Control buttons	7
2.2	Protective boot	7
2.3	Batteries	8
2.4	Docking Cradle	8
2.5	Service	8
3	Operation	9
3.1	Basic Operation	9
3.2	Menu navigation	10
3.3	Fitting the sensor	13
3.4	Taking a reading	14
3.4.1	Vibration readings	15
3.4.2	Vibration Analysis (Vibration bands)	17
3.4.3	Frequency spectrum	19
3.4.4	Live Update Mode	19
3.5	Configuration menus	20
3.5.1	Setup Wizard	20
3.5.2	Manual Setup	22
3.5.3	Device Settings	23
4	Route Management	25
5	ReO Software	26
6	Optional accessories	27
6.1	AC-7315 Strobe attachment	27
6.2	Third party Bluetooth headphones	28
6.3	BNC to BNC connecting cable	28
7	Specification	29
8	Maintenance	30
9	Disposal	30
10	CE-Declaration	31



1 Safety Instructions

1.1 Disclaimer of Liability

The observance of this technical documentation is essential for the proper and safe operation of the product. We assume no liability for injury to persons, damage to property or financial losses resulting from failure to comply with this technical documentation. In this case the liability for material defects is also excluded.

1.2 Pictograms and their Meanings



This symbol warns of dangerous situations which can result from misuse of the product.



HINT!

This symbol provides general and useful information for using the product.

1.3 User Qualification

Ensure that all work in conjunction with our device and accessories is performed by skilled, expert and authorized workers (for ATEX device and accessories according to EN 60079-14). Among these works are:

Installation and Commissioning

Installation and commissioning primarily concern work on electrical equipment. These works may be performed exclusively by electricians or workers instructed and supervised by an electrician in accordance with electrotechnical regulations/directives.

Change of System Specification

Any change of system specification has its effects on monitoring process with stationary systems and on the measuring sequence with portable measuring systems.

1.4 Intended Use

If devices, sensors and cables are used in a way not described in the relevant user manuals, function and protection may be impaired and serious personal damage, death or serious, irreversible injuries may result.

of System

- Handle the device and accessories with care in order to prevent damage to the systems or personal damage due to falling.
- Use system exclusively as originally intended. Any use other than originally intended is prohibited. Brüel & Kjær Vibro does not assume any liability for damages resulting from inappropriate use. The user is solely responsible. For originally intended use, see device and accessories documentation.
- Ensure that device and accessories is exposed only to admissible environmental influences specified in technical device and accessories data sheet.
- Maintain electrical equipment in regular intervals. Remedy defects, e.g. loose wires, defective connectors, immediately.

of Sensor

Exclusively use sensor as specified in data sheet. Any use other than specified is considered inappropriate. Mounted sensors must not be used as steps.

of Cable

- Exclusively use cable as specified in data sheet. Any use other than specified is considered inappropriate.
- Never use cable to pull plug out of socket.
- Check cable and connectors in regular intervals. Have any damage immediately repaired by a specialist
- Install cables properly in order to protect them from mechanical damage (e.g. squashing, abrasion of insulation) and to prevent trip hazards.

Use of Bought-In Items

For pickups and accessories not supplied by Brüel & Kjær Vibro the user is solely responsible. The user is bound to ensure that the demands on electrical safety and technical properties conform with the agreed data.

Brüel & Kjær Vibro does not assume any responsibility for bought-in items.

The user is liable for any defect on Brüel & Kjær Vibro products caused by bought-in items.



Hot surfaces

In line with the user manuals, the devices, sensors and cables can be operated in extensive ambient temperature ranges, whereby they can become hot through self-heating on housing walls and can produce burning.

When mounted at external heat or cold sources (e.g. machine parts), devices, sensors and cables can adopt dangerous temperatures, whereby burning, among other things, can occur in the event of contact.

1.5 Recommendations to User

If the use of the system in conjunction with machines or plant sections can produce risks outside of Brüel & Kjær Vibro's responsibility, the user is expected to prepare and distribute safety technical instructions or warnings and to ensure that the personnel concerned has received and understood same.

1.6 General Hints

Never operate damaged products. Upon delivery inspect the packaging for damage and compare the delivered items with your order documents.

Prohibition of Unauthorized Modifications

System and accessories must not be changed neither in construction nor safety technology without the express consent of Brüel & Kjær Vibro. Any unauthorized modification excludes Brüel & Kjær Vibro's liability for resulting damages.

This applies in particular to repair work, soldering work on P.C. boards and replacement of components/modules/P.C. boards.

When replacing parts, exclusively use the original Brüel & Kjær Vibro spare parts.

2 Overview

The **VIBROSTORE 100** (VST-100) is a simple to use rugged vibration monitoring and portable analysis instrument with on-board display of vibration levels. VST-100 automatically performs vibration analysis functions based on machine running speed. This functionality can help diagnose faults such as unbalance, misalignment and looseness.

The system is designed to take vibration measurements from assets (e.g. pumps, motors, fans and bearings) a simple route-based data collection mode. The unit displays vibration frequency plots and allows vibration severity and bearing condition to be monitored. VST-100 will collect and display all measurements in in as little as 3 seconds with one push of a button.

Combined with the powerful ReO software, the collected measurement data can be exported and used to perform even more advanced analytics and computing tasks. ReO is able to display valuable plots and graphs, to effectively detect and analyse vibration related problems of rotating machinery.

VST-100 supports an optional **strobe attachment** for determining machine speed it allows to connect to **Bluetooth headphones** for listening to bearing noise.

2.1 Control buttons

The VST-100 features an OLED display and 7 control buttons. Please refer to section “Operation” for a detailed description. When off, turning the VST-100 ON is achieved simply by pressing the center  button. The unit will automatically turn OFF if not used for a 1 to 60 minutes selectable auto turn off time.

When the main menu is displayed the device can be turned off by pressing the  button for 3 seconds.

2.2 Protective boot

The VST-100 is guarded by a removable protective rubber sleeve, which can be removed, by peeling back the protective boot on the narrow bottom part of the device and pulling the boot upwards.



2.3 Batteries

The VST-100 requires two type AA size batteries, which are replaced by removing the protective rubber boot first and second the battery compartment cover (held in place by multiple screws) as shown in the photographs below:

L91 lithium-Ion type AA batteries are recommended.



For installing new batteries, please remove all empty batteries first, before installing new or fully charged batteries. Always assure the correct battery orientation shown on the battery cover label. Pay attention to the proper fit of the rubber gasket, before closing.

2.4 Docking Cradle

VST-100 uses an infrared link on the back of the device to an included docking cradle. Do not obstruct the line of sight. The cradle interfaces the infrared communication of the VST-100 to an USB-port of a host PC. Use the supplied USB type A to mini USB cable. To use the docking cradle, slide the VST-100 without the rubber sleeve with the narrow end of the device first. The VST-100 should be held by the two brackets on the sides. The cradle has a belt clip and screw hole to be mounted on any rigid surface.

2.5 Service

VST-100 contains no user serviceable parts. In the unlikely case of malfunction, please return the complete unit to your supplier for repair.

3 Operation

3.1 Basic Operation

Color coded display shows ISO value, bearing condition in Bearing Damage Units (BDU) and RMS acceleration (g).

ISO and BDU values are alarm colour coded in **Green**, **Yellow** and **Red**.

Additional screens show displacement (mm or mils), frequency spectrum with cursor, and diagnostics for unbalance, misalignment and looseness.

Standard BNC connector for IEPE accelerometers.



Press and hold the **centre** button  to turn ON and press to take measurements - left, right, up and down arrows to navigate display

Separate buttons for Tacho , Strobe/Flashlight  and Bluetooth headphones 

Additional Functions when in main screen.

To turn on/off IEPE Power, press and **hold** the left arrow button  when on the main numbers screen

To show the battery level, press and **hold** the up arrow button  when on the main numbers screen, this function is optimized for alkaline manganese batteries.

To turn the unit off, press and **hold** the down arrow button  when on the main numbers screen

To switch to the menu, press and **hold** the centre button  when on the main numbers screen

Route manager button for downloading routes to the VST-100 or transferring machine readings to PC for trending. **via Bluetooth**

Accesses menu
Data collection. Take, assign and display route measurements.



3.2 Menu navigation

(starts a repeated measurement)

Live Update

Run Speed
1500 RPM

Machine Type
Motor
Pump

Motor Size
Under 300kW
Over 300kW

Foundation
Flexible
Rigid

Pump Type
Integrated Drive
External Drive

Foundation
Flexible
Rigid

Configuration
Live Update
Setup Wizard
Manual Setup
Device Settings

Manual Setup
ISO Alarms
BDU Alarms
Run Speed
Sensor mV/g

ISO Alarms
Alert
Danger

Alert
4.5

Danger
7.1

BDU Alarms
Alert
Danger

Alert
50

Danger
100

Run Speed
1500

Accel. Sensor
Sensitivity
100 mV/g

Enter by holding the center button  for 2 Seconds

Device Settings
Auto Off Time
Brightness
Languages
Factory reset
Graph Mode
Colour Scheme
Date & Time
Units
Information

Auto Off Time
1 Minute

Brightness
Mode
Level
Auto Dim Time

Mode
Standard
High

Brightness
5

Auto Dim Time
10 Seconds

Languages
English
German
Italian
French
Dutch

Menu navigation (continuation)

Enter by holding the center button for 2 Seconds

Configuration
Live Update
Setup Wizard
Manual Setup
Device Settings

Device Settings
Auto Off Time
Brightness
Languages
Factory Reset
Graph Mode
Colour Scheme
Date & Time
Units
Information

Factory Reset
Metric
Imperial

Graph Mode
Bar
Line

Color Scheme
Standard
White on Black
Black on White

Date & Time
12:00:00
01.01.2020

Units
Velocity
Run Speed
Velocity Type
Displacement

Velocity
mm/s - in/s

Run Speed
RPM - CPM - Hz

Velocity Type
RMS
Peak

Displacement
Pk
Pk-Pk



Menu navigation (continuation)

Enter by holding the factory button 

Machines
[Machine 1]
[Machine 2]
[Machine 3]
[Machine 4]

[Machine 1]
[Meas. Point 1]
[Meas. Point 2]
[Meas. Point 3]
[Meas. Point 4]

[Meas. Point 1]
Take Measurement
Run Speed
Save Measurement
Load Measurement

Enter by holding the headphone button  or 2 seconds

Bluetooth Config
Search
Forget a Device

Paired Devices
[Device 1]
[Device 2]

3.3 Fitting the sensor

VST-100 is supplied with a cable connected sensor (accelerometer) that connects to the BNC connector on VST-100. The nominal sensitivity of the sensor is 100 mV/g.

VST-100 can also accept any standard IEPE (CCS) accelerometer and the sensor sensitivity setting can be adjusted to accommodate other sensitivities (see section 3.5.2.3 in this manual). The default setting is 100 mV/g.





3.4 Taking a reading




To take a reading, press the center button  to turn the unit ON.

Place the sensor on a **rigid** part of the machine as close as possible to the desired measurement point (e.g. bearing block) using the magnet mount.

Pressing the circle button  again takes the reading.

N.B. for best results the sensor should be placed gently onto the measurement point by “rolling” the magnet onto the machine.

This is to avoid any sudden shocks that would be seen as large acceleration peaks by the sensor and could take some time (several seconds) to die away.

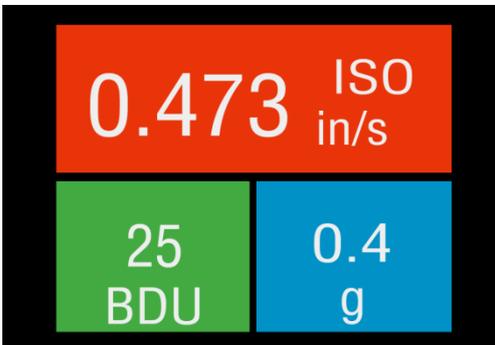

Taking a reading causes the overall vibration numbers screen to be displayed as shown in the example screen left.

This screen gives an overall view of the machine's vibration condition as explained in the following section.

3.4.1 Vibration readings

**WARNING!**

Through electro-magnetic interferences (acc. to EN 61000-4-3) influences on the measured values may arise.

Once a vibration reading has been taken, the display will show three values, as shown in the example screen (see chapter 3.4 Taking a reading). The values are color coded to show their alarm status as explained in the following sections. VST-100 can show the results as peak, peak to peak and root mean square (rms) values.

The three values shown in the readings screen are:

- ISO value (velocity in mm/second or inch/s)
- Bearing Noise in BDU (Bearing Damage Units)
- Total g (acceleration)


These readings are explained in more detail below with some examples.



ISO value (mm/s)

The ISO value (in mm/s or inch/s) is the large number displayed at the top of the screen. This is the RMS measurement of the calculated peak measurement of the vibration velocity in the frequency band 10Hz (600 RPM) to 1kHz (60,000 RPM) or 2Hz (120 RPM) to 1kHz (60,000 RPM) as specified by the ISO standard¹. The correct frequency band is automatically selected by VST-100 based on running speed.

The ISO value background is colour coded according to the ISO 10816-1 vibration velocity level chart (see below). The colour coded background indicates the condition of the machine according to the size and type of machine selected with the **Setup Wizard** (see section 3.5.1).

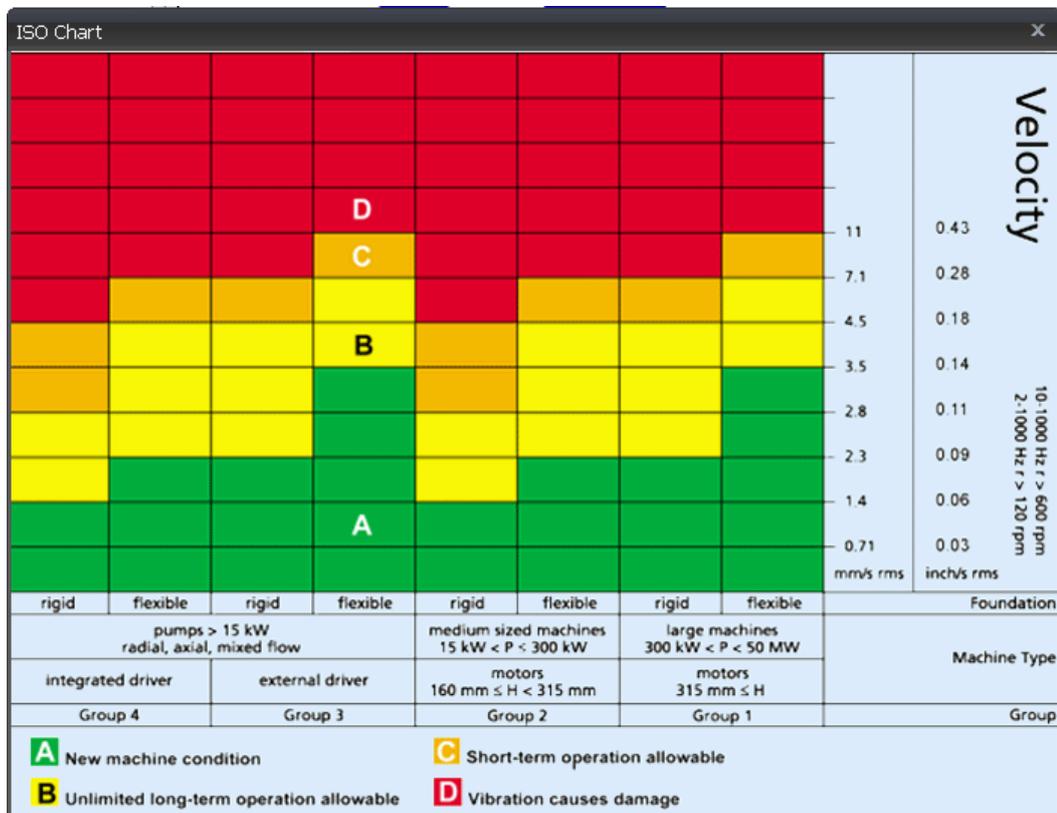

¹ ISO 10816-1:1995. Mechanical vibration -- Evaluation of machine vibration by measurements on non-rotating parts

Bearing Condition (BDU)

Below the displayed ISO value and to the left is the value of bearing noise (high frequency vibration) in **Bearing Damage Units** (BDU), where 100 BDU corresponds to 1 g RMS vibration measured in the frequency band between 1kHz and 10kHz. This is an indicator of the wear state of a bearing; higher number = higher bearing wear.

It is commonly held that 1g of high frequency vibration (100 BDU) corresponds to a relatively high level of bearing noise and so can be considered indicative of a damaged bearing. In other words, it may be helpful to think of the Bearing Noise figure as being very roughly equivalent to “percentage” of bearing wear. To quickly and easily identify the wear state of the bearings the background of this tile is colour coded like the ISO value as well. By default, the bearing noise is displayed on a **Red** background if it is above 100 BDU, a **Yellow** background between 50 and 100 BDU and a **Green** background below 50 BDU. However, the BDU alarm levels can be changed using the **Manual Setup** menu (see section 3.5.2.1).

Broadband acceleration (g)

This is the acceleration vibration value in g (RMS) of a bandpass filtered signal. The filter spans from 10Hz to 10kHz. This reading is shown in units of g (Earth's gravitational constant, where 1 g = 9.81 m/s²).

Displacement (µm or mils)

Pressing either the left  or right  arrow button when the reading screen is displayed will cause the VST-100 to display calculated peak or peak-to-peak displacement values (in µm or mils) on a blue background. There is no alarm level coding. The frequency band is chosen analogue to the ISO value measurement. Pressing either left  or right  arrow button again will revert to display of the ISO value (mm/s or inch/s).

3.4.2 Vibration Analysis (Vibration bands)

Pressing the down arrow button  brings up a display. It shows the readings of vibration velocity (mm/s or inch/s), or displacement (mm or mils) if selected, broken down into each of 3 bands.

The display shows the vibration level in frequency ranges that are all based on multiples (1X, 2X and 3X) of the specified Run Speed of the machine as displayed beneath the 3 bar graphs.



N.B. in order to perform a vibration analysis it is important that the running speed of the machine is entered correctly. This can be done with the “Setup Wizard” as described in Section 3.5.1 of this user guide, or by using the strobe attachment (see Section 6.1)

Typical but not exclusive for the appearance of following multiples of running speed² are:

1X = Unbalance:

The level of vibration in the frequency band based on the running speed is usually indicative of how well balanced the machine is. A **large** vibration at the running speed usually indicates that the machine is out of balance. However even a very well-balanced machine will typically show some vibration at the running speed, but this value should ideally be quite low (e.g. typically less than about 2 mm/sec for a medium sized machine).

2X = Misalignment:

A high level of vibration in the frequency band centred at twice the running speed is a possible indication of misalignment. Shaft misalignment can result in a double peak in the waveform. This will typically give rise to a vibration signal at double the running speed of the machine.

3X = Looseness:

High vibration in the frequency band centred at 3 times running speed is a possible indication of high mechanical looseness (e.g. loose mounting bolts, weak foundations etc.).


² Multiples of running speed are sometimes referred to as “orders”.

3.4.3 Frequency spectrum

Pressing the down arrow button  once more brings up a display, where the vibration levels are shown as a frequency spectrum plot in the range from 0 to 1 kHz.

The heights of the peaks indicate the RMS vibration level (in mm/s or inch/s) at each frequency point in the spectrum.

The values to the right of the screen show the frequency (in Hz or RPM) and the RMS vibration level (in mm/s or inch/s) at the position of the cursor (red dotted line). The cursor position can be moved by use of the left  and right  arrow buttons.

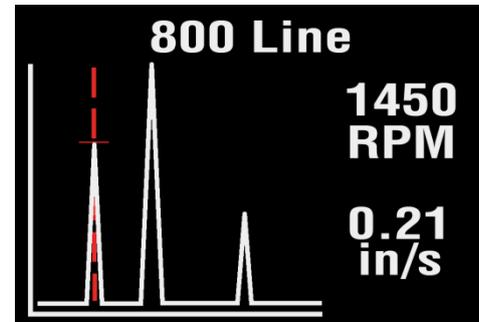

Pressing the down arrow button  increases the resolution of the frequency axis from 100 Lines (i.e. 10 Hz or 600 RPM resolution) to 800 Lines (i.e. 1.25 Hz or 75 RPM resolution). Increasing the resolution effectively **zooms** into the frequency spectrum. To display the full spectrum at the higher resolution the display must be **scrolled** using the left  and right  arrow buttons.

3.4.4 Live Update Mode

It is possible to have the VST-100 continuously display readings that are taken at intervals of approx. 1 second.

Live Update is selected from the **Configuration menu**, which is entered by holding down the center button  for **2 seconds**.

It is possible to use live update with the basic readings screen, the VA bands screen or 100 line frequency spectrum. Pressing the center button  at any time during live update will take a single measurement and stop live update mode.



3.5 Configuration menus


The configuration menu is entered by pressing and holding down the center button  for **2 seconds**.

Moving up and down the menu is achieved by pressing the up  and down  buttons which causes the menu item to be highlighted. Pressing the circle button  will select the highlighted menu item. Left  and right  arrow buttons can be used to move backward and forward through the menus.

All changed settings will be saved immediately and do not require to be saved additionally.



3.5.1 Setup Wizard

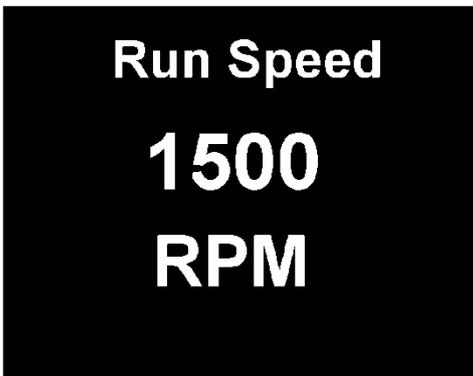



Selecting the Setup Wizard opens a dialogue that allows the machine running speed to be entered and the ISO alarm levels to be set automatically according to the size and type of machine to be monitored.

The first Setup Wizard screen to be displayed shows the currently selected running speed in the pre-selected units (Hz or RPM).

Changing the running speed is achieved by pressing the up arrow button  (to increase run speed) or down arrow button  (to decrease run speed). Pressing and holding either of the buttons will quickly change the displayed value.

Pressing the center button  again brings up the next screen which allows the machine type (motor or pump) to be selected.

If a **motor** is selected the size must also be selected (under or over 300 kW) or if a **pump** is selected, it must be specified whether it has an integrated or external drive unit.

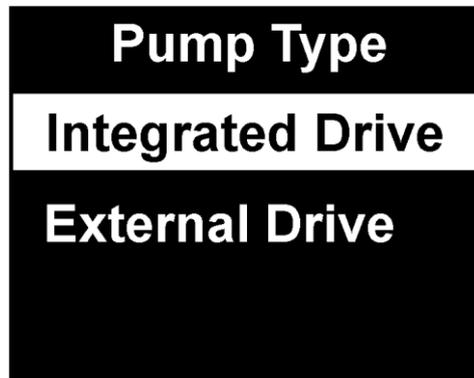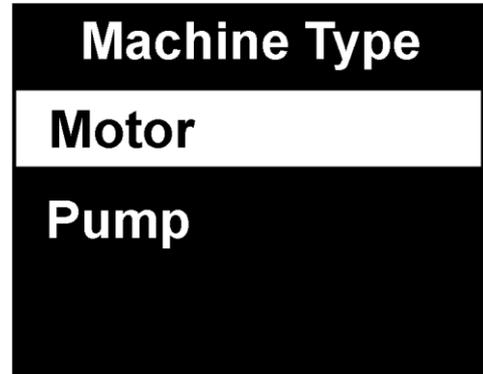

Selecting the machine type and size allows the ISO alarm levels to be set accordingly, as does specifying the type of mounting (rigid or flexible).



As a basic “rule of thumb”, unless a machine is bolted down to a concrete floor, its mounting should be considered as being **flexible**.

Many motors and pumps are mounted on a frame or structure and should be considered as flexibly mounted.




3.5.2 Manual Setup

3.5.2.1 BDU alarm settings

Selecting **BDU Alarms** allows the alarm levels at which the BDU readings change color to be altered by the user. Normal levels are displayed on a **Green** background.




The default BDU thresholds are 50 for **ALERT** and 100 for **DANGER**. These levels are typical for medium sized machine bearings operating at run speeds in the region of 1000 to 3000 RPM. Larger bearings or higher run speeds may need increased BDU threshold values to identify worn or bad bearings.

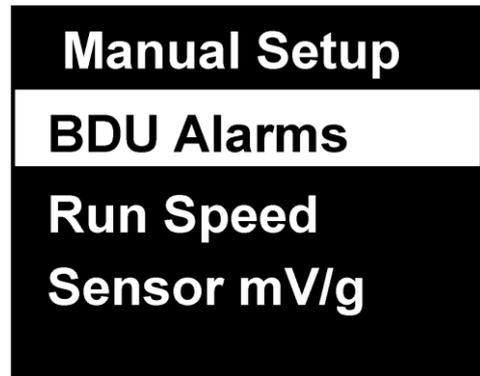

The BDU threshold values are designated as **ALERT** (where readings turn **Yellow**) and **DANGER** (where readings turn **Red**).

Both these threshold values can be set independently using the up  and down  arrow buttons.

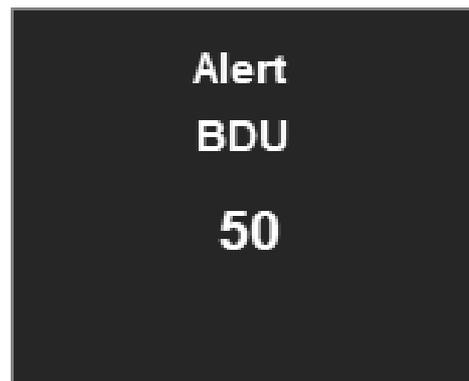

3.5.2.2 Run Speed

Run speed can also be set manually via the up  and down  arrow buttons.

3.5.2.3 Sensor mV/g

Accelerometer sensitivity (in mV/g) can be manually set using the up  and down  arrow buttons to allow the use of any desired sensor within the range 1mV/g to 1000mV/g. This enables the resolution and range of the VST-100 to be set by the user.

Even measurements defined in the in the route management context will use this setting. Remember to restore this setting if you had to change it for a specific measurement point.

**Accelerometer
Sensitivity**

101.4

mV/g

3.5.3 Device Settings

There are two pages of Device Settings menus. To advance to the second page the down arrow button  should be used. Selecting a menu option is achieved by the up  and down  arrow buttons and by pressing the center button .

Device Settings

Auto Off Time

Brightness

Languages

Factory Reset

Device Settings

Graph Mode

Colour Scheme

Date & Time

Units



The **Auto Off Time** can be set from 1 minute up to a maximum value of 60 minutes, in increments of 1 minute.

The **Brightness** level can be set anywhere between 1 (least brightness) up to 10 (full brightness).

The operating **Language** can be selected depending on the exact model. Please refer to the product specifications.


The **Graph Mode** can be set to display the frequency spectrum as either a Line graph or a Bar graph.

The display **Color Scheme** can be configured as standard (full colour) or monochrome, e.g. for convenient viewing in direct sunlight.

Date & Time setting can be achieved using the up , down , left  and right  arrow buttons.

Selecting **Units** from the Advanced Settings menu allows the velocity readings to be displayed in either mm/s or inch/s.

Run Speed units can be displayed in units of Hertz³ (Hz), revolutions per minute (RPM) or cycles per minute (CPM).

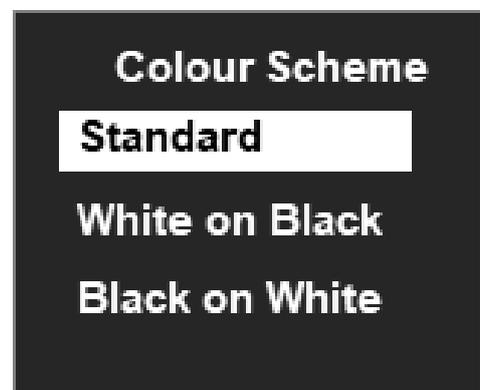

³ Hertz are equivalent to, and also sometimes referred to as, cycles per second (CPS).



4 Route Management

Pressing the Route Manager button (industry icon , located just below the down arrow  button) brings up the Machines menu.

Machines have user-defined names up to 16 characters long.

Scrolling the list of machines is achieved with the up  and down  arrow buttons.

Selecting a machine is done with the center button , which then brings up a list of **measurement points** for that machine.

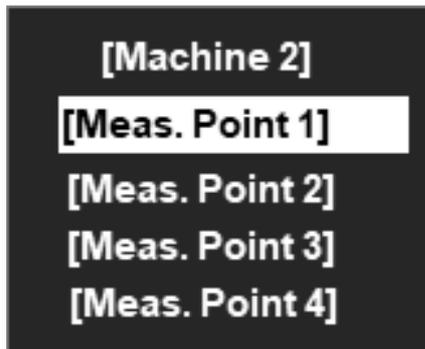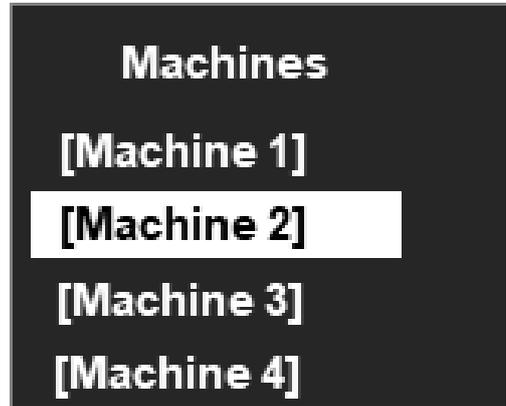


Measurement points also have user-defined names up to 16 characters long.

The list of measurement points can also be scrolled by using the up  and down  arrow buttons and each measurement point can be selected using the center button .

The various options for each measurement point (MP) are then displayed:

1. **Take Measurement** – takes a new reading and saves it to this MP
2. **Run Speed** – adjust the run speed of the Machine for this measurement point.
3. **Save Measurement** – saves the previously taken reading to this MP.
4. **Load Measurement** – loads a previous reading (e.g. for re-display)

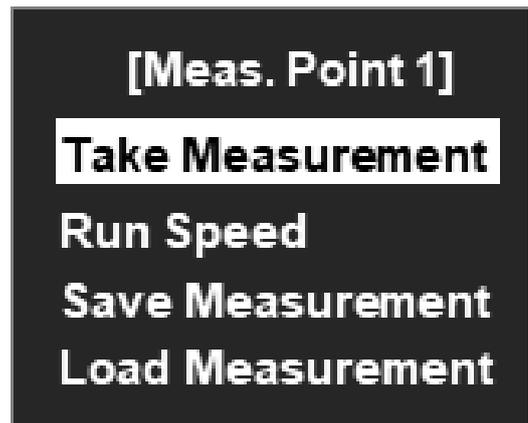

Machines and their measurement points are downloaded from the **ReO** trending and route management software for PC using the supplied USB docking cradle or the Bluetooth interface.

The exact list of machines to be downloaded is determined by the user in **ReO**.




5 ReO Software

ReO is the PC based software that allows users to view trends of vibration readings taken with VST-100, in a way that enables predictions to be made about machine condition.

ReO is very powerful and highly functional route editor and analysing software, which is described in more detail in its own instruction manual. This can be downloaded from our website.

ReO allows display of vibration data in a variety of different ways including vibration frequency spectra, bearing noise and ISO trend plots, waterfall diagrams (see figure below) and can generate reports either manually or automatically (e.g. by sending out **email alerts**).

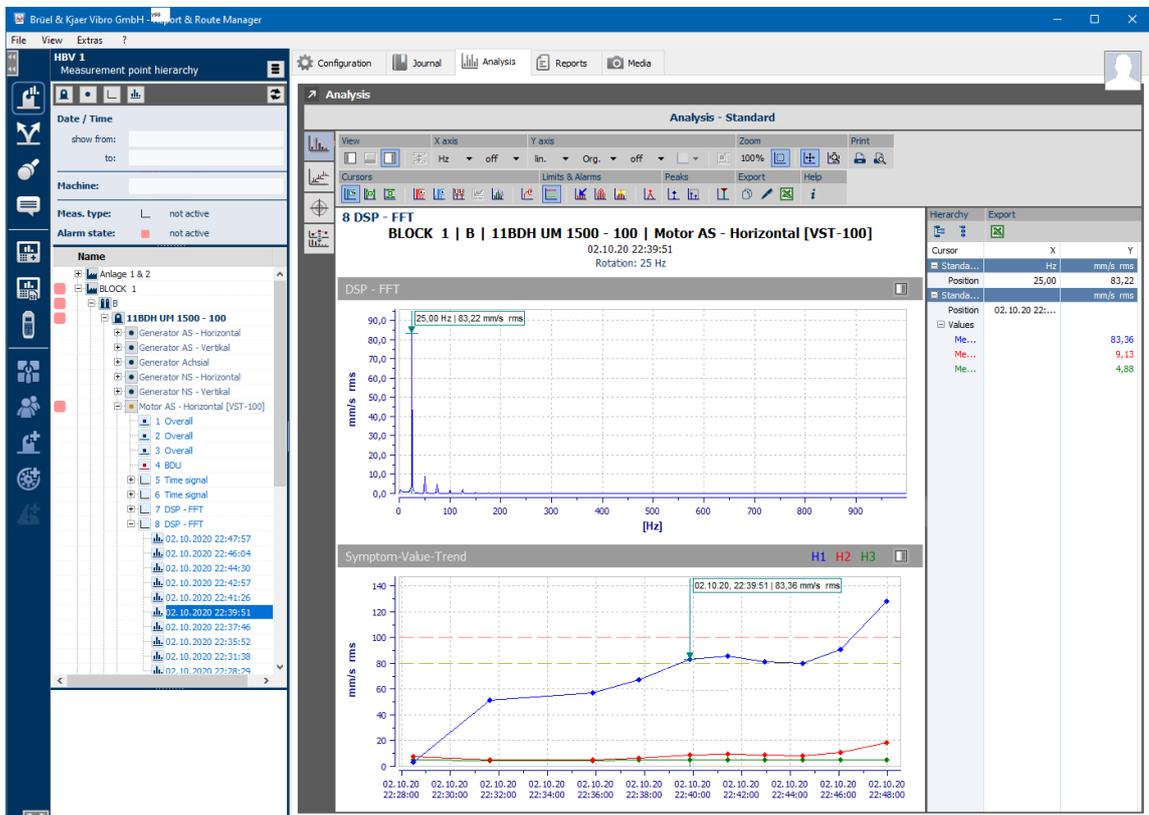

6 Optional accessories



6.1 AC-7315 Strobe attachment

Pressing the top left strobe button  brings up the run speed display and causes the strobe to flash at the displayed rate. The flash rate can be increased or decreased with the up  and down  arrow buttons and the run speed will simultaneously update.

Holding the strobe button  down for 2 seconds will put the strobe attachment into flashlight mode to give a continuous bright light.



WARNING!

With strobe lighting moving parts can appear stationary and care should be taken not to touch moving parts when using the strobe attachment.



6.2 Third party Bluetooth headphones

Pressing the headphones button  (top right button) the Bluetooth mode is enabled and allows the VST-100 to wirelessly connect to a set of Bluetooth earphones. Bluetooth is deactivated after restarting the device or by pressing the headphone button again. Other active Bluetooth devices might disturb the process of connecting your headphones. With connected Bluetooth headphones the user is now able to listen to an audio output of the accelerometer signals and can hear detected bearing noises.

In order to connect your headphones, make sure they support A2DP (stereo) profiles as well as Bluetooth 4.2 or higher. Pairing your Bluetooth headphones is easy to achieve, by following the instruction below.

PAIRING SEQUENCE

1. Headset must be in pairing mode. Avoid other active Bluetooth devices.
2. On VST-100, press and hold the headset button  until the Bluetooth Configuration menu appears. Select "Search" and press the center button .
3. Follow the menu prompts. Note: Headset and VST-100 should be on for 15 seconds before pressing headset button to reconnect.
4. Before putting on the headset, turn the volume down to its lowest and then adjust to a comfortable level.

Please refer to the Bluetooth Headset manual from the manufacturer for further instructions.

6.3 BNC to BNC connecting cable



WARNING!

Before connecting the VST-100 to any buffered output, make sure to turn off the IEPE Power (CCS) by pressing and holding the left arrow button  when on the main numbers screen. IEPE can be activated again by pressing holding the left arrow button  when on the main numbers again. Otherwise this connection could damage both devices permanently.

Connecting the BNC to BNC cable to a buffered output of machine vibration detectors, the VST-100 can collect vibration data and visualize the data. This powerful function enables the user to connect the VST-100 to existing vibration monitoring devices. Watch out for installations with inverted polarity. Measurements will be false.

7 Specification

Size	200 mm x 60 mm x 26 mm	
Weight	280 g	
Environmental		
Degree of Protection	IP67	
Operating:	0 °C to 50 °C (32 °F to 122 °F)	
Storage:	-20 °C to 70 °C (-4 °F to 158 °F)	
Power supply	2 x AA L91 lithium-ion batteries	
Battery life	Auto power OFF - typically 50 hours continuous operating time (with type AA L91 lithium-ion batteries) depending on brightness setting	
Frequency range	2/10 Hz to 1 kHz (ISO) 1 kHz to 10 kHz (BDU) 10 Hz to 1 kHz (vibration bands)	
Max frequency resolution	1.25 Hz @ 800 lines FFT setting	
Measurements displayed	Acceleration in g Velocity in mm/s (or inch/s) Bearing noise in BDU (bearing damage units) Displacement (microns, mils)	
Displayed Frequency Units	Hertz (Hz), RPM or CPM	
Input range	User selectable with accelerometer sensitivity	
Dynamic range	96 dB (0.01 g resolution)	
Vibration bands for quick failure indication (RPM = run speed)	Unbalance	1x RPM
	Alignment	2x RPM
	Looseness	3x RPM
Accuracy	+/-5 % (acceleration: +/- 10% below 20Hz)	
Languages in device	German / English / French / Italian / Spanish / Portuguese / Dutch / Chinese / Korean / Japanese	
Accessories	<ul style="list-style-type: none"> AC-7312 docking cradle & USB cable AC-438 Spiral cable with two pin connectors AS-063 Acceleration sensor AC-7316 Nylon carrying case AC-7313 Protective boot AC-276 Magnet with M8 Stud 	
Options	<ul style="list-style-type: none"> AC-7315 Strobe attachment REO/VST-100 Report & Route Manager Software 	



8 Maintenance



HINT!

Maintenance and service work must only be performed by trained qualified personnel!

1. Clean the device on the outside in regular intervals using a damp cloth.
2. Ingress of humidity, i.e. from water or other liquids, into the device must be prevented!

9 Disposal

The device is subject to the Waste Management Act for electrical and electronic devices.



Do not discard the device in the household waste and observe the local regulations for disposal of waste. You can also return the device to Brüel & Kjær Vibro - Leydheckerstrasse 10 - 64293 Darmstadt - Germany

- WEEE-Reg.-No. DE 69572330

10 CE-Declaration



EU-Konformitätserklärung / EU- Declaration of conformity

Hiermit bescheinigt das Unternehmen / The company

Brüel & Kjær Vibro GmbH
Leydheckerstraße 10
D-64293 Darmstadt



die Konformität des Produkts / herewith declares conformity of the product

Portables Vibrations-Messgerät / Portable vibration measuring instrument

Typ / Type

VIBROSTORE 100 (VST-100)

mit folgenden einschlägigen Bestimmungen / with applicable regulations below
EU-Richtlinie / EU-directive

2014/30/EU EMV-Richtlinie / EMC-Directive

2011/65/EU + (EU) 2015/863 Richtlinie zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten / EU Directive for the restriction of the use of certain hazardous substances in electrical and electronic equipment

Angewendete harmonisierte Normen / Harmonized standards applied

EN 61326-1: 2013
EN IEC 63000:2018

Bereich / Division
Brüel & Kjær Vibro GmbH

Unterschrift / Signature
CE-Beauftragter / CE-Coordinator

Ort/Place **Darmstadt**
Datum / Date **13.01.2021**


(Niels Karg)

Contact

Brüel & Kjær Vibro GmbH

Leydheckerstrasse 10
64293 Darmstadt
Germany

Phone: +49 6151 428 0
Fax: +49 6151 428 1000

Corporate E-Mail: info@bkvibro.com

Brüel & Kjær Vibro A/S

Skodsborgvej 307 B
2850 Nærum
Denmark

Phone: +45 77 41 25 00
Fax: +45 45 80 29 37

Homepage: www.bkvibro.com

BK Vibro America Inc.

1100 Mark Circle
Gardnerville NV 89410
USA

Phone: +1 (775) 552 3110