





- According to EN 62 061, DIN EN ISO 13 849-1
- Category 4 to EN 954-1
- Input module for realization of:
 - 8 E-STOP, single-channel, autostart
 - 6 E-STOP, single-channel, + 1 E-STOP, 2-channel, autostart
 - 5 E-STOP, single-channel, + 1 -STOP, 2-channel + 1 signal input, autostart
 - 8 E-STOP, single-channel, manual start
 - 6 E-STOP, single-channel, + 1 E-STOP, 2-channel, manual start
 - 5 E-STOP, single-channel, + 1 E-STOP, 2-channel + 1 signal input, manual start
 - As an alternative to the 2-channel E-STOP, a light curtain (LC type 4) according to EN 61496-1 can be connected.
- Broken wire and short circuit monitoring function with error indication
- 2 semiconductor outputs per function module for status indication
- LEDs for status indication
- Width: 22.5 mm (BG 5914) or 45 mm (BH 5914)

Block Diagram

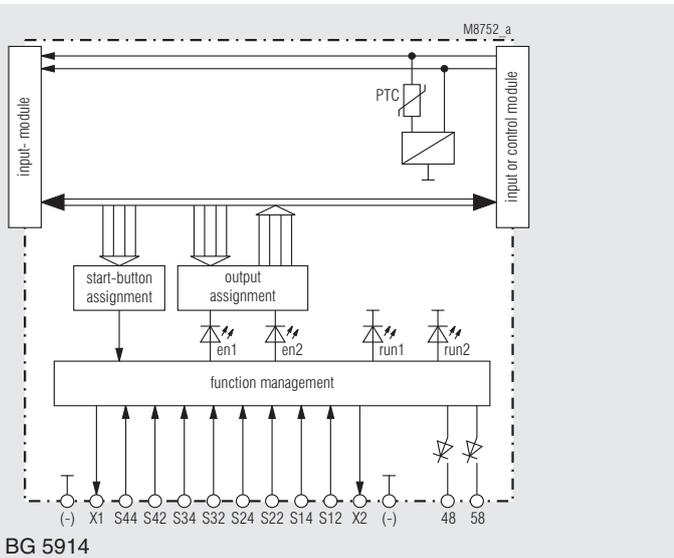

BG 5914

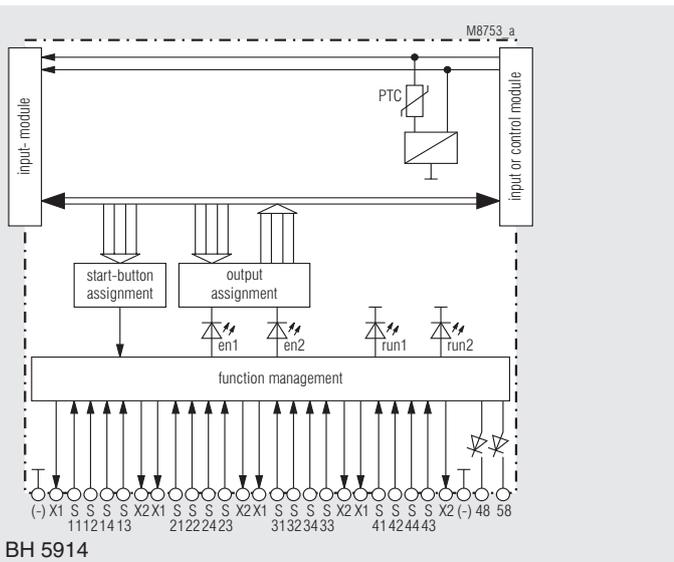

BH 5914

Approvals and Marking




Applications


Realization of fail-safe control circuits for protection of people and machinery

The modules BG 5914 and BH 5914 have been developed for applications in which numerous one-channel Emergency stop contacts have to be monitored.

Circuit Diagrams

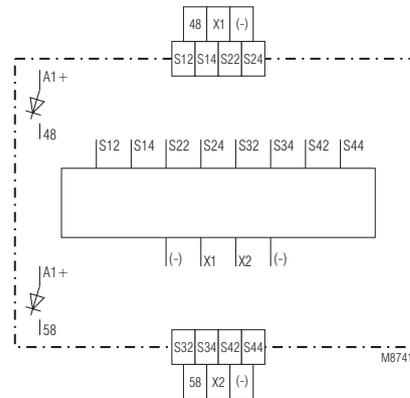

BG 5914.08

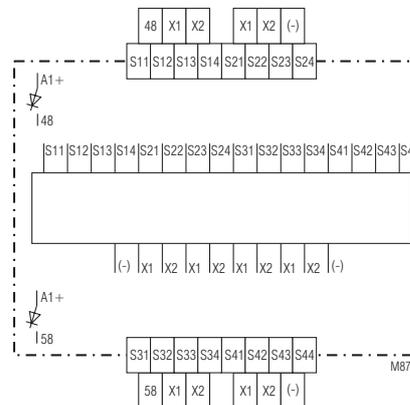

BH 5914.08

General information SAFEMASTER® M

The maximum configuration of the SAFEMASTER® M multi-function safety system is as follows:

- the control unit BH 5911
- up to 3 input modules BG 5913, or BG/BH 5914, BG/BH 5915
- up to 3 output modules BG 5912
- 1 diagnostic module BG 5551 for CANopen, or
- 1 diagnostic module BG 5552 for Profibus-DP

The BH 5911 controls the whole system.

The input/output modules can be used to expand the control unit in a modular way into a multi-functional safety system.

To transmit status messages of the individual modules to a monitoring or control unit, one of the following diagnostic modules may be connected:

- BG 5551 for CANopen
- BH 5552 for Profibus-DP

Notes

In respect of function and settings, the modules BG 5914 and BH 5914 are completely identical.

- The modules BG 5914 have 8 inputs with one common ground. This is the ground of the overall system. They are suitable for all applications in which volt free contacts are used, or where there is a common ground (e.g. 2-channel light curtains). They need only 8 terminals and thus only have an overall width of 22.5 mm.
- The modules BH 5914 have 8 completely DC-decoupled inputs. In the settings for a 2-channel Emergency stop, several systems can be operated from the same E-stop button.
- The modules BH 5914 **must** be used as soon as one Emergency stop contact is executed on several modules. Here, short-circuit monitoring is effected by a certain type of wiring according to the application examples.

Indication

Green LEDs: on, when all inputs are present and start button activated.

White LEDs Run 1/ Run 2 and outputs 48 and 58: indicate the current status of the module.

Signal Input

This input does not have a safety function. It is used only to signal the status of a switch (NO contact) and does not affect the safety outputs assigned to the module (e.g. when the machine is set to service mode).



- If voltage is applied to the input, the white LED Run 2 is ON. The semiconductor output 58 is OFF as long as no Emergency stop is active.
- If no voltage is applied to the input, the white LED Run 2 will go out, and the semiconductor output 58 will become conductive.

Setting of the Module

In respect of function and settings, the modules BG 5914 and BH 5914 are completely identical.

The modules are assigned to the start buttons and the safety outputs via the DIP switches.

The function is set via the rotary switches. To prevent accidentally adjustments, these elements are covered by a front plate and are redundant.

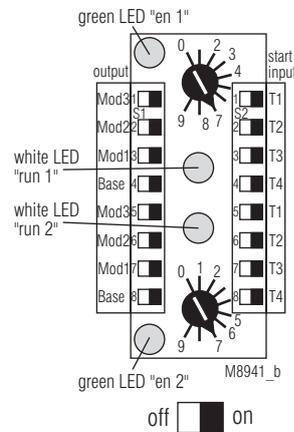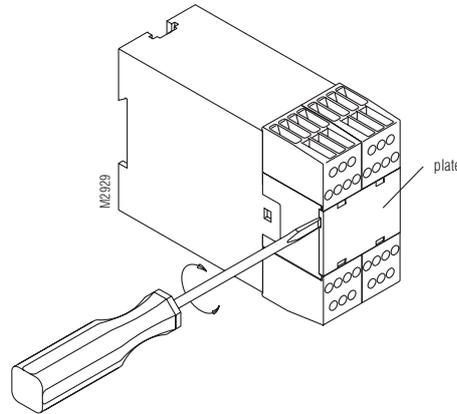

Note:

- Settings to the unit must be performed by skilled personnel while the unit is off-load.
- Before the front cover is removed, potential equalization must be provided.

Sw.	Function
0	8 Emergency stop single-channel, autostart
1	6 emergency stop, single-channel, + 1 emergency stop, 2-channel with short circuit detection, autostart
2	6 emergency stop, single-channel, + 1 emergency stop, 2-channel without short circuit detection or 1 LC type 4, autostart
3	5 emergency stop, single-channel, + 1 emergency stop, 2-channel without short circuit detection or 1 LC type 4 + 1 signal input, autostart
4	8 Emergency stop single-channel, manual start
5	6 emergency stop, single-channel, + 1 emergency stop, 2-channel with short circuit detection, autostart
6	6 emergency stop, single-channel, + 1 emergency stop, 2-channel without short circuit detection or 1 LC type 4, manual start
7	5 emergency stop, single-channel, + 1 emergency stop, 2-channel without short circuit detection or 1 LC type 4 + 1 signal input, manual start
8, 9	8, 9 not assigned (error 5)

Setting of the Module

Note:

This module is intended for applications in which numerous one-channel Emergency off contacts are to be monitored.

The settings 2, 3, 6, and 7 are required for example when several modules are connected to a common Emergency stop sensor. Short-circuit recognition can be realized externally by means of proper wiring.

With a LC type 4 (according to IEC/EN 61496-1), short-circuit monitoring takes place in the light curtain itself.

Single-channel emergency stop

With single-channel safety inputs, safety category 4 can only be realized when voltfree contacts are used (see wiring examples).

With static, voltage signals, it is imperative to use 2-channel signal sensors to ensure safety category 4.

Automatic Start

Automatic start is performed only when supply voltage is switched on, or when enabling has been cancelled by pressing Emergency stop.

All other errors nevertheless require confirmation by a start key.

Manual Start

To start the system, do not keep the start key pressed for more than 3 seconds. A module may also be assigned several start keys.

Indication of System Errors

These errors are indicated by flashing codes of the white LEDs Run 1 and/or Run 2. The green LEDs and all outputs turn inactive. The system will only restart after the supply voltage has been switched off and on again.

Error codes*

- 0) (both white LEDs are off):
Another input module indicates a system error.
- 1) To 4): not used
- 5) Incorrect setting of function:
 - The rotary switches have different or incorrect positions
- 6) LED Run 1 flashes: Undervoltage
LED Run 2 flashes: Overvoltage
- 7), 8) Not used
- 9) Connection error between the input modules
 - No terminating connector available.
 - Control or input module defective
- 10), 11), 12), 13) a. 14) Internal errors

* number of short flashing impulses, followed by a longer space

Indication

	Permanently OFF	Pulsing	Permanent ON
Output 48	all relays inactive due to system error	one input function not available	Activation of the assigned safety outputs is permissible
LED Run 1	all relays inactive due to system error	one input function not available (LED run 2 ON) or system error when LED Run 2 is OFF or flashing	Activation of the assigned safety outputs is permissible
Output 58	Activation of the assigned safety outputs is permissible or system error	Wait for start	one input function not available or K1 and K2 active and indicator contact inactive
LED Run 2	all relays inactive due to system error or K1 and K2 active and indicator contact inactive	all relays inactive due to system error	No system error


Indication of Function Errors

Function errors are indicated by the white LED Run 1 and by output 48; the white LED Run 2 remains on. Output 58 remains on as long as the error is pending; it flashes regularly as soon as enabling via the assigned start button is possible again:


Error codes*

- 1) Emergency stop
- 2) Time error: Start button has been kept pressed for more than 3 seconds
- 3) Time error: The 2 signals of the 2-channel Emergency stop fail to correspond for too long (250 ms)
- 4) Error on start button (kept permanently pressed)
- 5) Input error (short-circuit, interruption)
- 6) Error in the control unit (input or output error recognized in the control unit)


* number of short flashing impulses, followed by a longer space

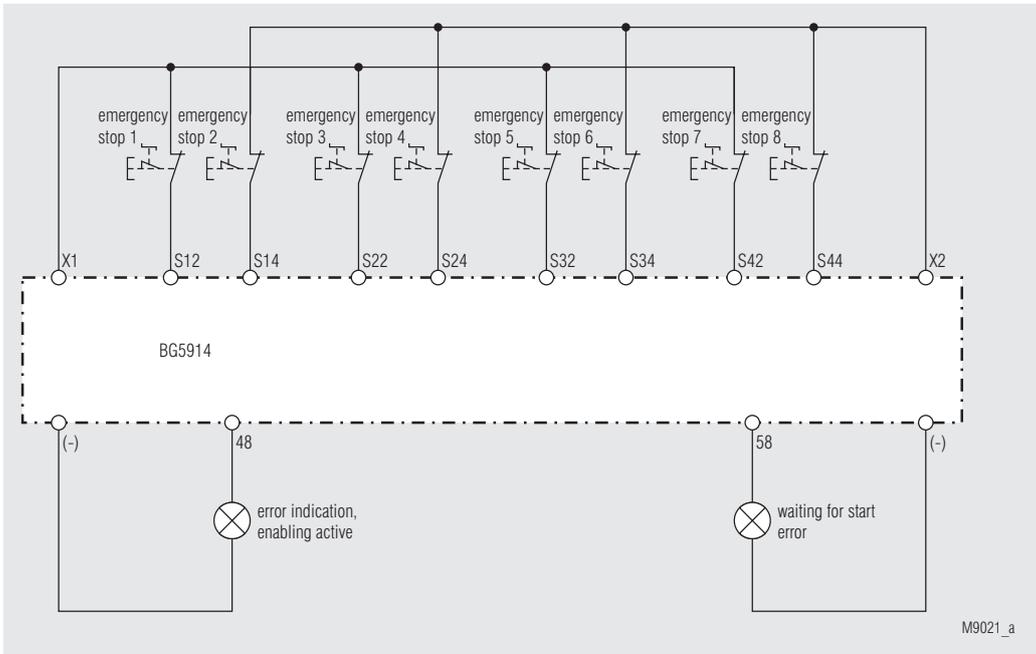


BG 5914, 8 Emergency stop, single-channel, voltfree contacts; functions: 0 or 4

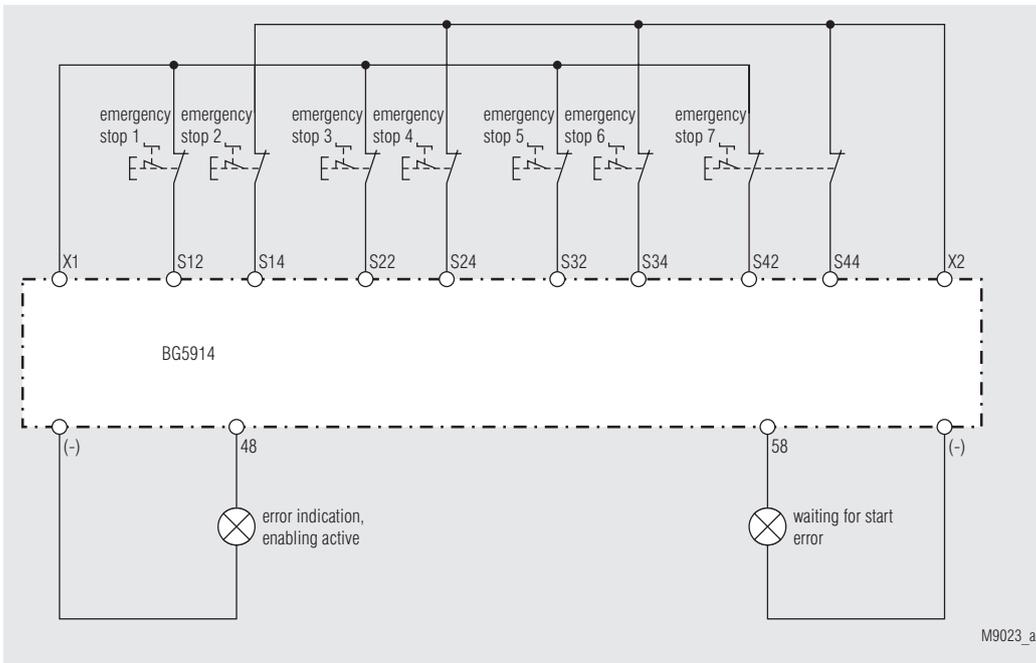


BG 5914, 6 Emergency stop single-channel, + 1 Emergency stop, 2-channel with short-circuit detection; functions: 1 or 5

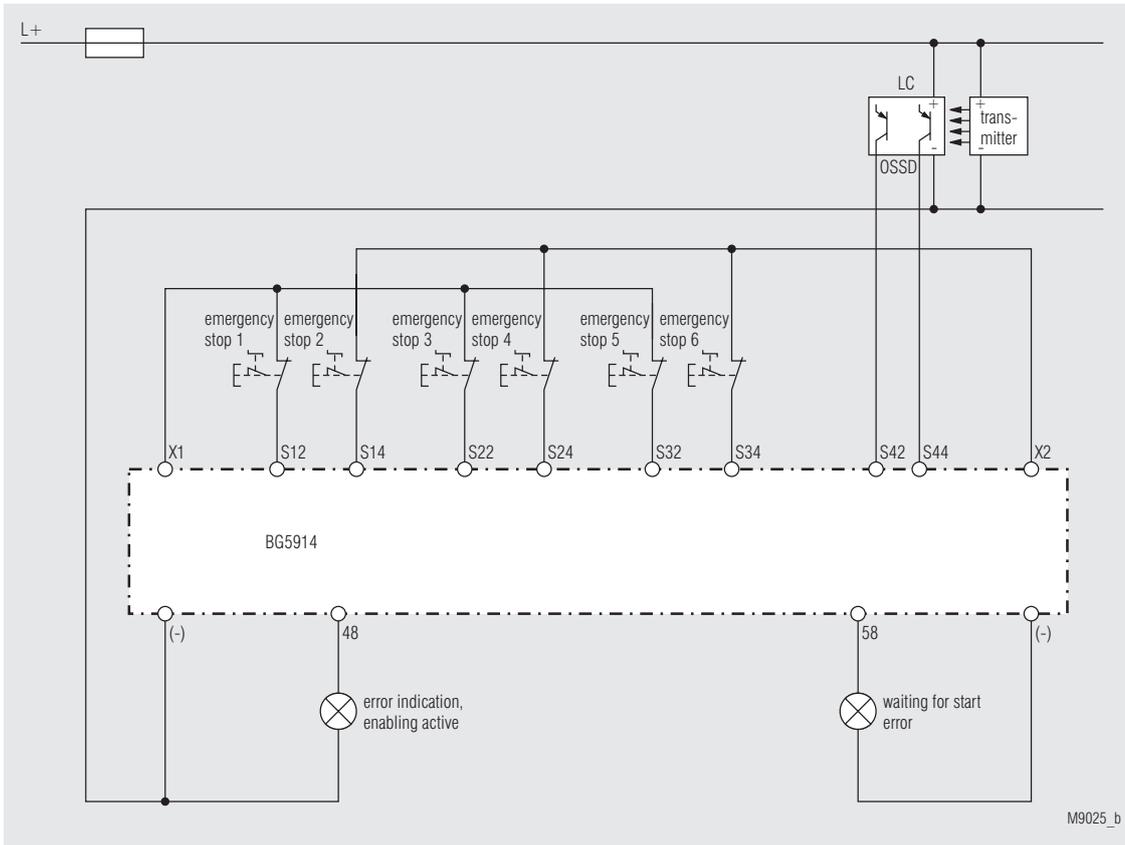


BG 5914, 6 Emergency stop single-channel + 1 light curtain type 4; functions 2 or 6

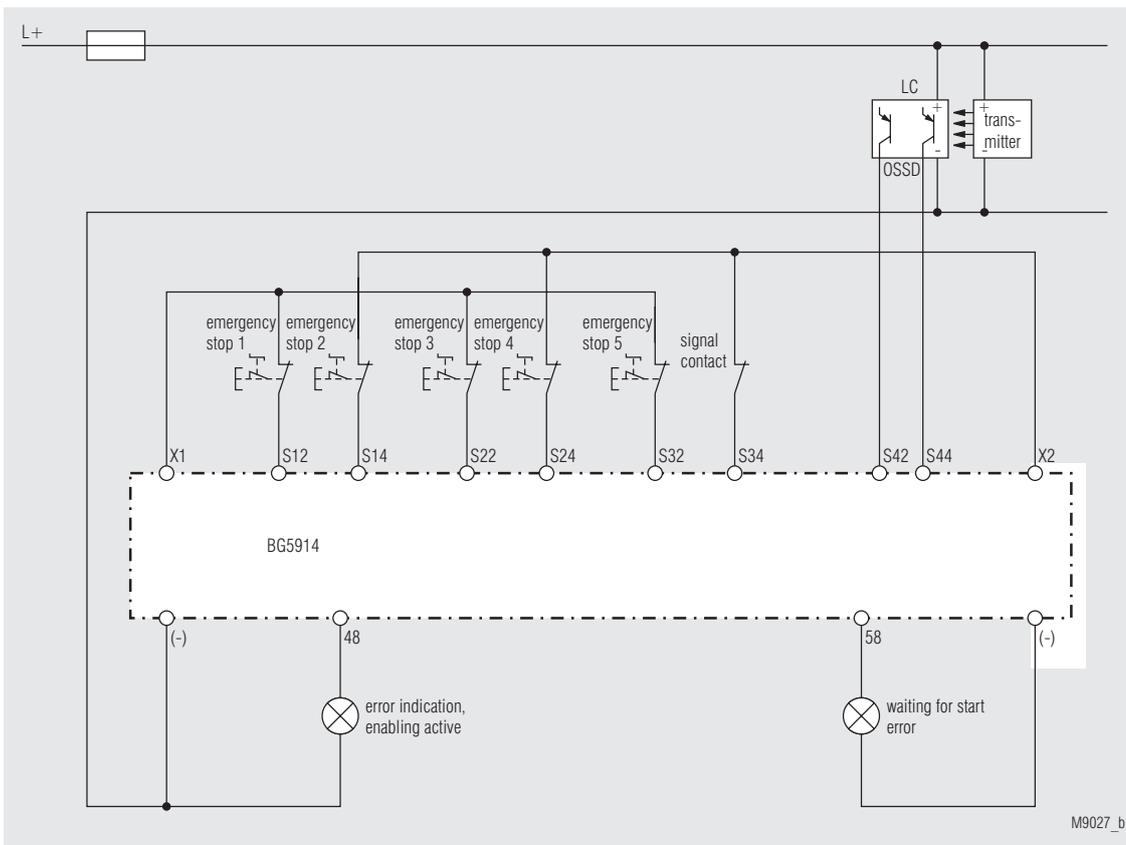

BG 5914, 5 Emergency stop single-channel + 1 light curtain type 4 + 1 signal contact; functions 3 or 7

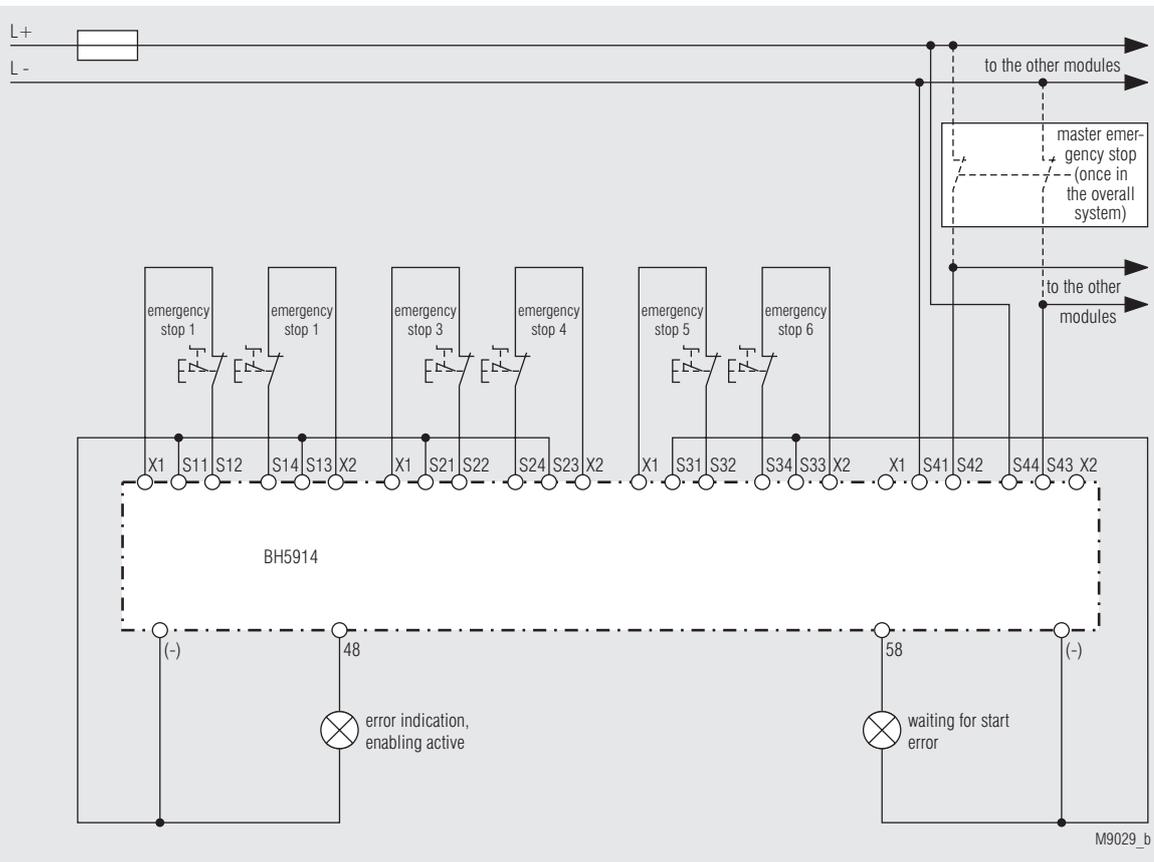

BH 5914, 6 Emergency stop single-channel + 1 Master Emergency stop 2-channel with short-circuit detection by means of wiring; functions: 2 or 6

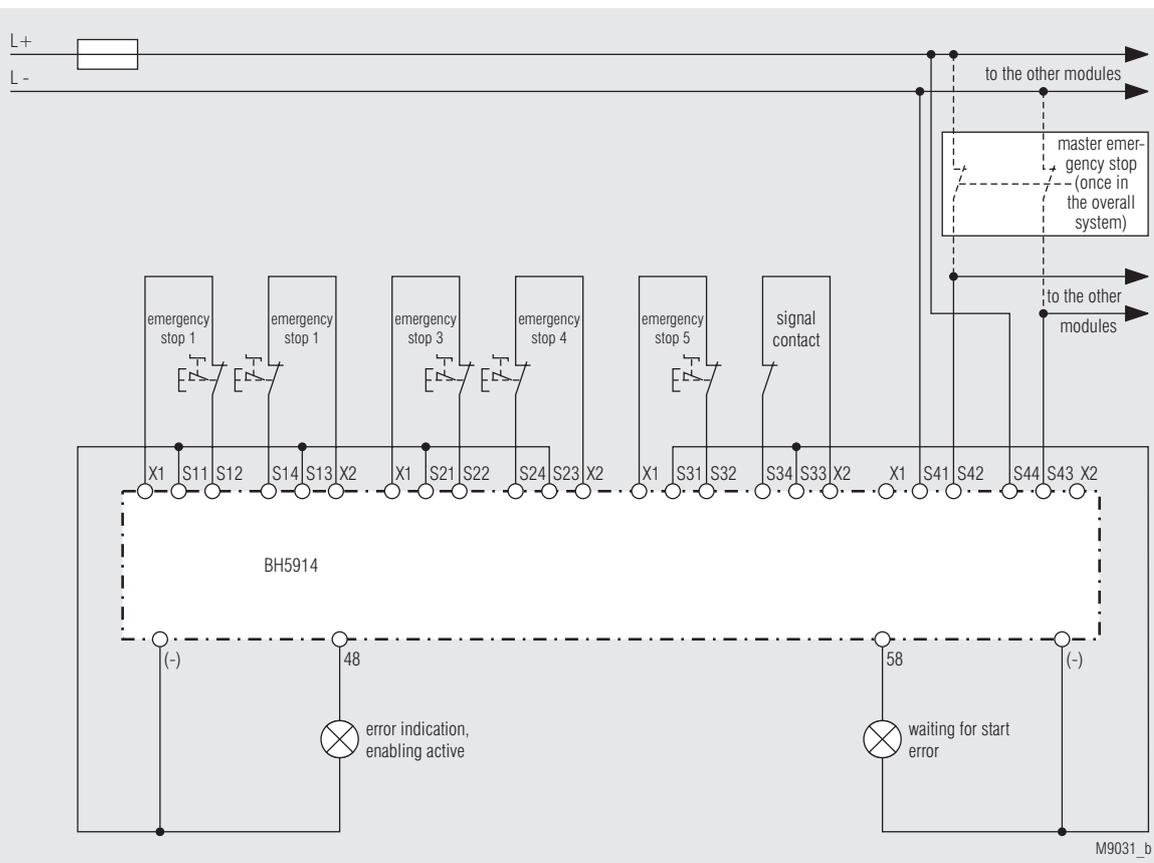

BH 5914, 5 Emergency stop single-channel + 1 Master Emergency stop 2-channel with short-circuit detection by means of wiring + 1 signal contact; functions 3 or 7

Technical Data**Voltage Supply**

Nominal voltage U_N : DC 24 V
(comes from basic module BH 5911)

Voltage range:
with max. 5% residual ripple: 0,85 ... 1.15 U_N
Nominal consumption: max. 60 mA
(no load on semiconductor outputs)

Short-circuit protection of the modules: internally with PTC

Inputs:

Control voltage over
X1, X2, X42, 48, 58: DC 23 V at U_N

Control current over
S11, S12, S13, S14, S21, S22, S23, S24, S31, S32, S33, S34, S41, S42, S43 S44: 4.5 mA each at U_N

Minimum voltage at
S12, S14, S22,
S24, S32, S34 S42, S44 DC 16 V

Outputs

Output on terminal 48 and 58: Transistor outputs, plus-connected
Output nominal voltage: DC 24 V, max. 100 mA constant current, max. 400 mA for 0.5 s
Internal overtemperature and overload protection

Reaction times (time till reaction of the assigned output):

Typ. operating time with U_N :

Input modules BG 5914 and BH 5914	Manual start	Automatic start	
		First start	Restart
Emergency stop	max. 75 ms	max. 850 ms	max. 75 ms

Break time (reaction time):

Input modules BG 5914 and BH 5914	
Emergency stop	max. 33 ms

General Data

Operating mode: Continuous operation
Temperature range: $\pm 0 \dots + 50 \text{ }^\circ\text{C}$
At an operating temperature of $50 \text{ }^\circ\text{C}$ the modules must be mounted with a distance of 3 - 5 mm.

Clearance and creepage distances
rated impuls voltage / pollution degree: 4 kV / 2 IEC 60 664-1

EMC
Static discharge: 8 kV (contact discharge)
IEC/EN 61 000-4-2
(corresponding to test severity level 3)

HF irradiation: 10 V / m IEC/EN 61 000-4-3

Fast transients:
on supply line A1-A2: 2 kV IEC/EN 61 000-4-4
on signal and control lines: 2 kV IEC/EN 61 000-4-4

Surge
between supply lines: 1 kV IEC/EN 61 000-4-5

between supply line and ground: 2 kV IEC/EN 61 000-4-5

HF-wire guided: 10 V IEC/EN 61 000-4-6

Interference suppression: Limit value class B EN 55 011

Technical Data**Degree of protection**

Housing: IP 20 IEC/EN 60 529

Terminals: IP 20 IEC/EN 60 529

Housing: Thermoplast with V0 behavior according to UL Subject 94
Amplitude 0.35 mm

Vibration resistance:

Shock resistance
Acceleration: 10 g
Pulse duration: 16 ms
Number of shocks: 1000 per axis on three axes
Climate resistance: 0 / 050/ 04 IEC/EN 60 068-1

Terminal designation: EN 50 005

Wire connection: 1 x 2.5 mm² stranded wire with sleeve, or
1 x 4 mm² massive or
2 x 1.5 mm² litz with sleeve
DIN 46 228-1/-2/-3/-4

Wire fixing: Box terminal with wire protection, removable terminal strips

Mounting: DIN rail IEC/EN 60715

Dimensions**Width x height x depth:**

BG 5914: 22.5 x 84 x 121 mm

BH 5914: 45 x 84 x 121 mm

Safety related data

Safety data for other variants are available on request

Purchase order numbers input module Emergency stop

BG 5914.08/00MF0: 8 floating inputs (width 22.5 mm)
Article Number: 0056633

BH 5914.08/00MF0: 8 floating or non-floating inputs
(width 45 mm)
Article Number: 0056460

